

























 




 




 



 

 
 


 

 

 

 



 





 
 
 

















 



















Original	Replacement
 Power	 Power
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Menu	 Menu / Home
 Return	 Back / Return
 Tv Vol+	 Vol+
 CH+	 CH+ / Page+
 Tv Vol-	 Vol-
 CH-	 CH- / Page-
 Mute Tv	 Mute / Dimmer
 Input Tv	 AV / Input / RDS
 1	 1
 2	 2
 3	 3

Original	Replacement
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 ENT	 Shift + OK





Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	Play/Memory		Play / Slow
	Pause/Preset		Pause / Step / Freeze
	Stop/Preset Up		Stop / Hold
	<</Tuning Up		<< / Tune-
	>>		>> / Tune+
	I<</Tuning		I<< / Preset-
	>>I		>>I / Preset+
	Music		Sound / Title
	Stereo		Audio / Lang I/II
	Surround		Eject / Surround
	Movie		Picture / Format
	Sleep		Sleep / Timer
	TV		TV/Radio /
	Sur Decode		D.Menu / Top
	Setup		Setup / OPT /
	Up		Up
	Info		Info / Angle
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Return		Back / Return
	Vol+		Vol+
	iPod		Smart / List
	Vol-		Vol-
	Entertainment		Display / Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6



















 
 












Original	Replacement	Original	Replacement
	7		AUX2
	8		Shift + 2
	9		Shift + 3
	HDMI 1		Shift + 4
	HDMI 2		
	0		
	HDMI 2		
	Off		
	Pause/Presets		
	Stop/Presets Up		
	<</Tuning Up		
	I<</Tuning		
	Univolume		
	FM		
	Intellibeam		
	Option		
	ENT		
	AUX1		





Original	Replacement
 Power	 Power
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Top Menu	 D.Menu / Top
 Menu	 Menu / Home
 Return	 Back / Return
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Replacement
 9	 9
 0	 0
 +10	 Guide / EPG / -/-
 ENT	 Fav / Marker / PC
 <<	 >> / Tune+
 Stop	 Stop / Hold
 >>	 I<< / Preset-
 I<<	 << / Tune-
 Pause	 Pause / Step / Freeze
 >>I	 >>I / Preset+
 Play	 Play / Slow

