

## Owner's Manual

<Operations>

### Blu-ray Disc™ Home Theater Sound System

Model No. SC-BTT466  
SC-BTT465  
SC-BTT405



Unless otherwise indicated, illustrations in this Owner's Manual are of SC-BTT466.



#### Firmware updates

Panasonic is constantly improving the unit's firmware to ensure that our customers are enjoying the latest technology.

Panasonic recommends updating your firmware as soon as you are notified.

For details, refer to "Firmware updates" (⇒ 14) or

<http://panasonic.jp/support/global/cs/> (This site is in English only.)

Thank you for purchasing this product.

Please read these instructions carefully before using this product, and save this manual for future use.

If you have any questions, visit : [www.panasonic.com/support](http://www.panasonic.com/support)

Register online at [www.panasonic.com/register](http://www.panasonic.com/register) (U.S. customers only)

Please also read through the "Owner's Manual <Setup>".

# IMPORTANT SAFETY INSTRUCTIONS

Read these operating instructions carefully before using the unit. Follow the safety instructions on the unit and the applicable safety instructions listed below. Keep these operating instructions handy for future reference.

- 1 Read these instructions.
- 2 Keep these instructions.
- 3 Heed all warnings.
- 4 Follow all instructions.
- 5 Do not use this apparatus near water.
- 6 Clean only with dry cloth.
- 7 Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9 Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11 Only use attachments/accessories specified by the manufacturer.
- 12 Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13 Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14 Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



## Precautions

### WARNING

#### Unit

- To reduce the risk of fire, electric shock or product damage,
- Do not expose this unit to rain, moisture, dripping or splashing.
  - Do not place objects filled with liquids, such as vases, on this unit.
  - Use only the recommended accessories.
  - Do not remove covers.
  - Do not repair this unit by yourself. Refer servicing to qualified service personnel.

#### AC power supply cord

- The power plug is the disconnecting device. Install this unit so that the power plug can be unplugged from the socket outlet immediately.

#### Speaker

To prevent injury, this apparatus must be securely attached to the wall in accordance with the installation instructions.

#### Small object

- Keep the screws out of reach of children to prevent swallowing.

### CAUTION

#### Unit

- This unit utilizes a laser. Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.
- Do not place sources of naked flames, such as lighted candles, on this unit.

#### Placement

- To reduce the risk of fire, electric shock or product damage,
- Do not install or place this unit in a bookcase, built-in cabinet or in another confined space. Ensure this unit is well ventilated.
  - Do not obstruct this unit's ventilation openings with newspapers, tablecloths, curtains, and similar items.

#### Speaker

##### • Use only supplied speakers

- The main unit and supplied speakers are to be used only as indicated in this Owner's Manual. Failure to do so may lead to damage to the amplifier and/or the speakers, and may result in the risk of fire. Consult a qualified service person if damage has occurred or if you experience a sudden change in performance.
- Be careful not to cross (short-circuit) or reverse the polarity of the speaker wires as doing so may damage the speakers.
  - Hold the speaker firmly to avoid injury by dropping the speaker when carrying.
  - You can damage your speakers and shorten their useful life if you play sound at high levels over extended periods.
  - Do not touch the front area of the speakers. Hold by the sides.
  - Place speakers on flat, secure surfaces.
  - To avoid injury by falling or dropping the speaker, place the speaker cables with care not to stumble or hook.
  - Do not stand on the speaker. Be cautious when children are near.

## Batteries

Mishandling of batteries can cause electrolyte leakage and may cause a fire.

- Danger of explosion if battery is incorrectly replaced. Replace only with the type recommended by the manufacturer.
- When disposing of the batteries, please contact your local authorities or dealer and ask for the correct method of disposal.
- Do not mix old and new batteries or different types at the same time.
- Do not heat or expose to flame.
- Do not leave the battery(ies) in a car exposed to direct sunlight for a long period of time with doors and windows closed.
- Do not take apart or short circuit.
- Do not recharge alkaline or manganese batteries.
- Do not use batteries if the covering has been peeled off.

Remove batteries if you do not intend to use the remote control for a long period of time. Store in a cool, dark place.

## To dispose or transfer this unit

The unit may keep the user settings information in the unit. If you discard this unit either by disposal or transfer, then follow the procedure to return all the settings to the factory presets to delete the user settings. (→ 35, "To return all settings to the factory preset.")

- The operation history may be recorded in the memory of this unit.

### Information on Disposal in other Countries outside the European Union



This symbol is only valid in the European Union. If you wish to discard this product, please contact your local authorities or dealer and ask for the correct method of disposal.

## Restriction on use of unauthorized copied content

This unit adopts the following technology for copyright protection.

### Cinavia Notice

This product uses Cinavia technology to limit the use of unauthorized copies of some commercially-produced film and videos and their soundtracks. When a prohibited use of an unauthorized copy is detected, a message will be displayed and playback or copying will be interrupted.

More information about Cinavia technology is provided at the Cinavia Online Consumer Information Center at <http://www.cinavia.com>. To request additional information about Cinavia by mail, send a postcard with your mailing address to: Cinavia Consumer Information Center, P.O. Box 86851, San Diego, CA, 92138, USA.

# Table of contents

IMPORTANT SAFETY INSTRUCTIONS . . . . 2

Precautions . . . . . 2

## Getting started

Package contents and accessories . . . . . 5

Unit and media care . . . . . 6

Playable media . . . . . 7

Control reference guide . . . . . 9

Setting up the system . . . . . 11

Settings . . . . . 13

Inserting or removing media . . . . . 15

Enjoying TV with the speakers  
of the system . . . . . 15

HOME menu . . . . . 16

Multi User Mode . . . . . 17

## Playback

Playback . . . . . 18

Enjoying Bluetooth® . . . . . 20

## TV & Radio

“HDMI CEC” . . . . . 22

Listening to the Radio . . . . . 23

## Advanced operations

Network Service  
(Enjoying NETFLIX, etc.) . . . . . 24

Option menu . . . . . 25

Setup menu . . . . . 27

Speaker installation option . . . . . 33

## Reference

Troubleshooting guide . . . . . 35

Specifications . . . . . 42

Limited Warranty . . . . . 47

Index . . . . . Back Cover

# Package contents and accessories

Check the package contents and supplied accessories before using this unit.


## Package contents

BTT466

BTT465

Main unit

(SA-BTT466/SA-BTT465)





FRONT  
(SB-HFS4810)


CENTER  
(SB-HC4010)

SUBWOOFER  
(SB-HW4010)


(Speakers)









(Stands)




(Bases)




(Screws)



SURROUND  
(SB-HFS4010)






(Speaker cables)

BTT405

Main unit


(SA-BTT405)





FRONT  
(SB-HFS4010)


SURROUND  
(SB-HFS4010)

(Speakers)










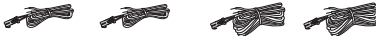

(Speaker cables)




CENTER  
(SB-HC4010)

SUBWOOFER  
(SB-HW4010)







## Parts number

System	BTT466	BTT465	BTT405
Stands (with cables)	RYP2001-K: WHITE RYP2001A-K: RED		—
Bases	RYP2002-K		—
Screws	XYN5+F14FJK		—
Speaker cables	REE1966: GREEN REE1971: BLUE REE1972: GRAY		REE1962: WHITE REE1963: RED REE1966: GREEN REE1971: BLUE REE1972: GRAY

## Accessories

- ☐ 1 Remote control  
(N2QAYB000966)



- ☐ 2 Batteries for remote control



- ☐ 1 AC power supply cord  
(K2CB2YY00105)



- ☐ 1 FM indoor antenna  
(RSA0044)



- ☐ 1 Sheet of speaker cable sticker



- Product numbers are provided in this Owner's Manual correct as of January 2014. These may be subject to change.
- Do not use AC power supply cord with other equipment.

## Unit and media care

### ■ Clean this unit with a soft, dry cloth

- Never use alcohol, paint thinner or benzine to clean this unit.
- Before using chemically treated cloth, carefully read the instructions that came with the cloth.

### ■ This unit's lens

Use the lens cleaner (not supplied) to clean the unit's lens.

### ■ Clean discs

DO



DO NOT









Wipe with a damp cloth and then wipe dry with a dry cloth.

### ■ Disc handling precautions

- Handle discs by the edges to avoid inadvertent scratches or fingerprints on the disc.
- Do not attach labels or stickers to discs.
- Do not use disc cleaning sprays, benzine, thinner, static electricity prevention liquids or any other solvent.
- Do not use the following discs:
  - Discs with exposed adhesive from removed stickers or labels (rented discs, etc.).
  - Discs that are badly warped or cracked.
  - Irregularly shaped discs, such as heart shapes.

# Playable media

Device	Media markings	Device types	Contents format
BD		BD-Video	Video
		BD-RE	Video, JPEG, MPO
		BD-R	Video, MKV
DVD		DVD-Video	Video
		DVD-R	Video, AVCHD, MKV, JPEG, MPO, AAC, FLAC, MP3, WAV, WMA
		DVD-R DL	
		DVD-RW	Video, AVCHD
	—	+R/+RW/+R DL	
CD		Music CD	Music [CD-DA]
	—	CD-R CD-RW	MKV, JPEG, MPO, AAC, FLAC, MP3, Music [CD-DA], WAV, WMA
USB	—	USB devices (up to 2 TB)	MKV, MP4, MPEG2, JPEG, MPO, AAC, FLAC, MP3, WAV, WMA

- See pages 8 and 44 for more information on the types of content that can be played.

## ■ Types of discs that cannot be played by this unit

Any other disc that is not specifically supported or previously described.

- DVD-RAM
- Super Audio CD
- Photo CD
- DVD-Audio
- Video CD and Super Video CD
- HD DVD

## ■ Region management information

The unit can playback BD-Video/DVD-Video discs of the following regions codes, including "ALL":

Example:           BD-Video           DVD-Video



- The unit cannot playback discs in PAL format.

## ■ Finalize

Any DVD-R/RW/R DL, +R/+RW/+R DL and CD-R/RW that are recorded by a recorder need to be finalized by the recorder to play on this unit. Please refer to the recorder's owner's manuals.

## ■ BD-Video

This unit supports high bit rate audio (Dolby® Digital Plus, Dolby® TrueHD, DTS-HD High Resolution Audio™ and DTS-HD Master Audio™) adopted in BD-Video.

## ■ 3D

3D videos and 3D still pictures can be played back when this unit is connected to a 3D compatible TV using a High Speed HDMI Cable.

## ■ Music CD

- Operation and sound quality of CDs that do not comply with CD-DA specifications (copy control CDs, etc.) cannot be guaranteed to work.
- The digital audio content side of a DualDisc does not meet the technical specifications of the Compact Disc Digital Audio (CD-DA) format so playback may not be possible.

## ■ USB device

- This unit does not guarantee connection with all USB devices.
- This unit does not support USB device charging.
- FAT16, FAT32, and NTFS file systems are supported.
- This unit supports USB2.0 High Speed.
- This unit supports an HDD formatted in FAT32 and NTFS. If the HDD is not recognized, the power to the HDD may not be supplied. Supply power from an external source.




- It may not be possible to play the above media in some cases due to the type of media, the condition of the recording, the recording method, and how the files were created.
- The producers of the disc can control how discs are played, so you may not always be able to control play as described in this Owner's Manual. Read the disc's instructions carefully.



# Control reference guide


## Remote control

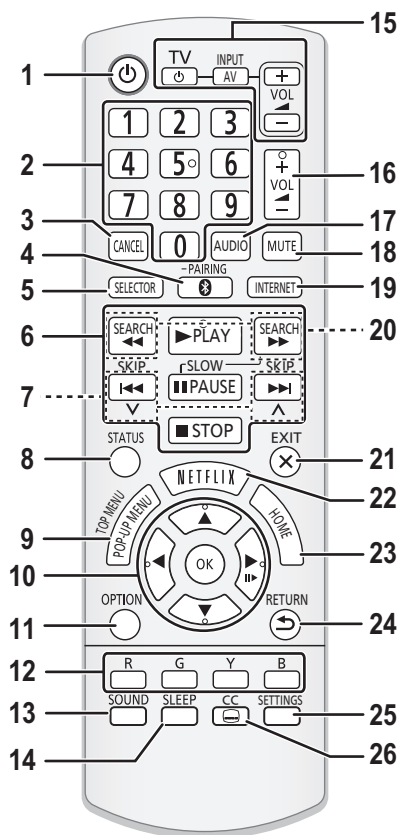

- 1 Turn the unit on and off
- 2 Select title numbers, etc./Enter numbers
- 3 Cancel
- 4 Select Bluetooth®/Enable pairing (⇒ 21)
- 5 Select an audio or video source
- 6 Basic playback control buttons (⇒ 18)
- 7 Select preset radio stations (⇒ 23)
- 8 Show the status messages (⇒ 19)
- 9 Show Pop-up Menu/Top Menu (⇒ 19)
- 10 [▲, ▼, ◀, ▶] : Move the highlight for selection  
[OK] : Confirm the selection  
[II▶] : Frame-by-frame (⇒ 18)
- 11 Show Option menu (⇒ 25)
- 12 Colored buttons (red, green, yellow, blue)  
Used for various purposes depending on the display
- 13 Set the sound effects (⇒ 26)
- 14 Set the sleep timer
  - ① Press [SLEEP].
  - ② While "SL \*\*" is displayed on the unit's display, press [SLEEP] several times to select the time (in minutes).
    - Timer selection is up to 120 minutes.
    - Select "OFF" on the unit's display to disable the function.
    - To confirm the remaining time  
Press the button again.
- 15 TV operation buttons  
[TV]: Turn the TV on and off  
[AV, INPUT]: Switch the input select  
[+ - VOL] : Adjust the volume
- 16 Adjust the volume of the main unit
- 17 Change audio (⇒ 18)
- 18 Mute the sound
  - "MUTE" flashes on the unit's display, while the function is on.
  - To cancel, press the button again or adjust the volume.
  - Muting is canceled if the unit is turned off.
- 19 Show the Home Screen of the Network Service (⇒ 24)
- 20 Select radio stations manually (⇒ 23)
- 21 Exit the Menu screen
- 22 Show NETFLIX screen (⇒ 24)
- 23 Show HOME menu (⇒ 16)
- 24 Return to previous screen
- 25 Show Setup menu (⇒ 27)
- 26 Show Closed Caption setup screen (⇒ 25, 29)


## ■ Using the remote control

Insert the batteries to the terminal so that it (+ and -) matches those in the remote control.

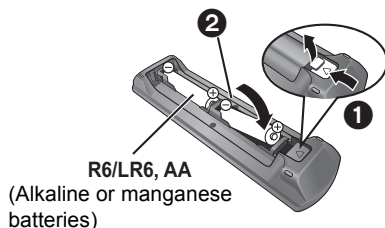


Point it at the remote control signal sensor on this unit. (⇒ 10)

## Main unit (Front)

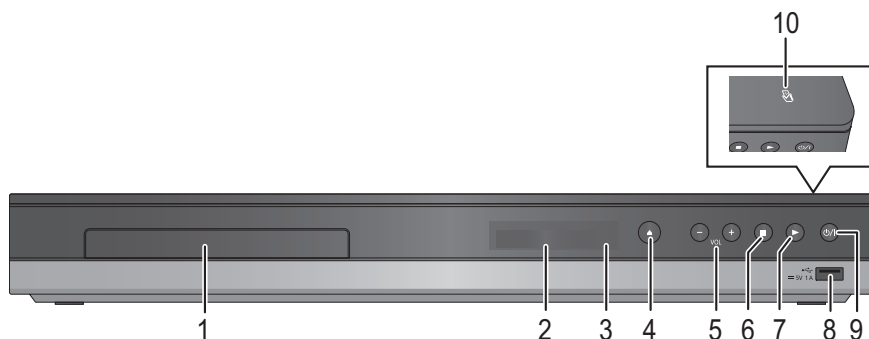

- |   |  |    |   |
|---|--|----|---|
| 1 | Disc tray  | 6  | Stop (⇒ 18)                                   |
| 2 | Display  | 7  | Start play (⇒ 18)                             |
| 3 | Unit's display list (⇒ 41)                         | 8  | USB port (⇒ 15)                               |
| 3 | Remote control signal sensor                       | 9  | <b>Standby/on switch (⏻/⏻) (⇒ 13)</b>         |
|   | Distance: Within approx. 7 m (23 feet).            |    | Press to switch the unit from on to standby   |
|   | Angle: Approx. 20° up and down, 30° left and right |    | mode or vice versa. In standby mode, the unit |
| 4 | Open or close the disc tray (⇒ 15)                 |    | is still consuming a small amount of power.   |
| 5 | Adjust the volume of the main unit                 | 10 | NFC touch area (⇒ 21)                         |

## Main unit (Rear)

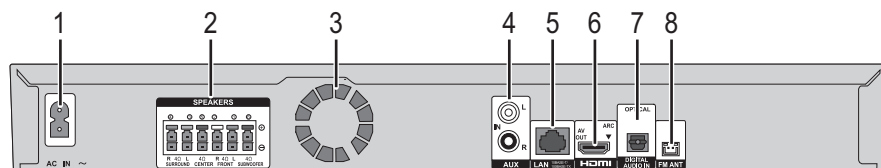

- |   |                   |   |                            |
|---|-------------------|---|----------------------------|
| 1 | AC IN terminal    | 5 | LAN port (⇒ 12)            |
| 2 | Speaker terminals | 6 | HDMI AV OUT (ARC) terminal |
| 3 | Cooling fan       | 7 | DIGITAL AUDIO IN terminal  |
| 4 | AUX terminal      | 8 | FM radio antenna terminal  |

# Setting up the system

Follow the "Owner's Manual <Setup>" to set up the system first.

## Precautions

### Speakers

- Keep your speakers at least 10 mm ( $13/32$ " ) away from the system for proper ventilation.
- For optional wall mount, refer to page 33.

### Center speaker

- Put it on a rack or shelf not to interfere with the TV's various sensors (ambient light, etc.).  
Vibration caused by the speaker can disrupt the picture if it is placed directly on the TV.

### Surround speakers

- Place the speakers at the same height or higher than ear level.

### HDMI

- Use the ARC\* compatible High Speed HDMI cables. Non-HDMI-compliant cables cannot be utilized.

It is recommended that you use Panasonic's HDMI cable. When outputting 1080p signal, please use HDMI cables 5.0 meters (16.4 ft.) or less.

\* ARC is an abbreviation of Audio Return Channel, also known as HDMI ARC. This feature allows a home theater system to receive and play audio from the TV through a single HDMI cable without additional wiring.

### DIGITAL AUDIO IN


- The dual audio cannot be changed. Change the setting on the connected device.

### AC power supply cord

- This unit consumes a small amount of AC power ( $\Rightarrow$  42) even when turned off in standby mode. For the purpose of energy conservation, the unit should be disconnected if you will not be using it for extended period of time.

## Other device connection

e.g.,

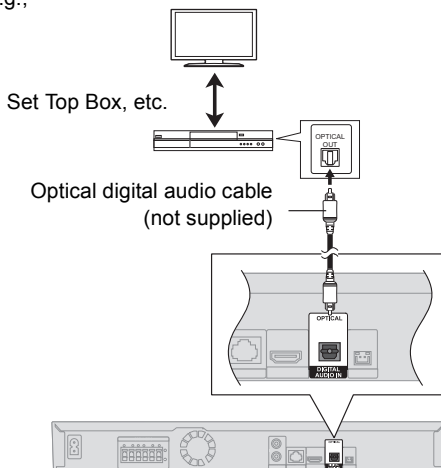

## Connecting to the network


The following services can be used when this unit is connected to broadband.

- Firmware can be updated (⇒ 14)
- You can enjoy BD-Live (⇒ 19)
- You can enjoy Network Service (⇒ 24)

For details about connection method, refer to the instructions supplied with the connected equipment.


### Wireless LAN connection

For wireless capability, connect the Wireless LAN Adaptor DY-WL5 (optional). **Only DY-WL5 can be used.** Read the owner's manual for DY-WL5 thoroughly when using it.

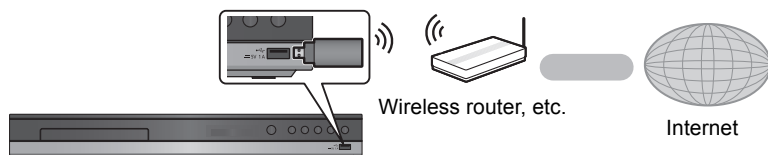

- For up-to-date compatibility information on your wireless router, refer to <http://panasonic.jp/support/global/cs/>  
(This site is in English only.)  
For additional information about this unit refer to <http://www.panasonic.com/support>
- The unit is not compatible with public wireless LAN services provided in airports, stations, cafes etc.

### LAN cable connection

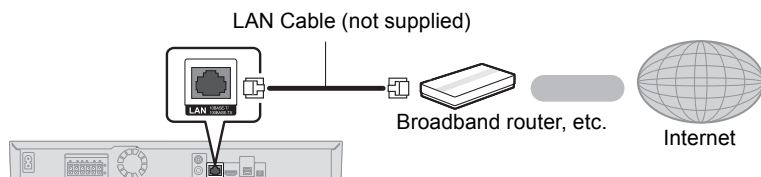

- Use category 5 or above straight LAN cables (STP) when connecting to peripheral devices.
- Inserting any cable other than a LAN cable in the LAN port can damage the unit.

# Settings

The following settings can be performed anytime in the Setup menu. (⇒ 29, 30)

## Easy Settings

After connecting your new home theater for the first time and pressing [⏻], the basic settings screen will appear.

### Preparation

Turn on the TV and select the appropriate video input.

#### 1 Press [⏻].


Setup screen appears.

#### 2 Follow the on-screen instructions to continue with the settings.

## Easy Network Setting

After completing “Easy Settings”, you can perform “Easy Network Setting”.

Select “Wired” or “Wireless” and press [OK].

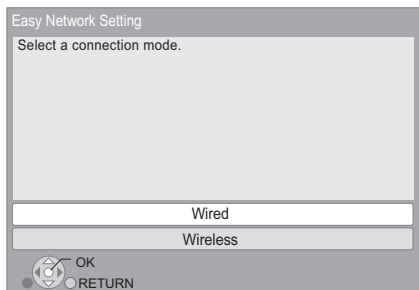

Follow the on-screen instructions to establish your connection settings.

- If “Wireless LAN Adaptor is not connected.” is displayed, check that the Wireless LAN Adaptor is fully inserted. Alternatively, disconnect and reconnect it.

## About the wireless connection

To obtain your network name (SSID\*) and encryption key (password).

The default settings may be printed on the router. If the SSID and password have been changed, consult the person responsible for setting up your network.

e.g.




For more details, refer to the manual supplied with the wireless broadband router, or contact your Internet provider.

For more information or assistance, refer to <http://www.panasonic.com/support>

### If your SSID is not displayed;

Search again by pressing the red button on the remote control.

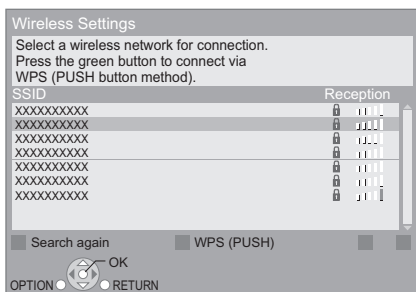

Stealth SSIDs will not be displayed; in this case, enter manually in the following order.

#### 1 To display the SSID input screen :

- While displaying the HOME menu, press the [SETTINGS] button on the remote control
- ⇒ select “Network” and press [OK]
- ⇒ select “Network Settings” and press [OK]
- ⇒ select “Wireless Settings” and press [OK]
- ⇒ select “Connection Setting” and press [OK]
- ⇒ select “Manual setting” and press [OK]

#### 2 Enter your SSID.

- If your wireless network is encrypted, go to page 14.


### If your wireless router supports WPS (Wi-Fi Protected Setup™);

You can easily set up a connection by pressing the green button on the remote control.

### If your wireless network is encrypted;

Enter your encryption key (password).

- You can switch between capital and lower case letters by pressing the "Shift" key.

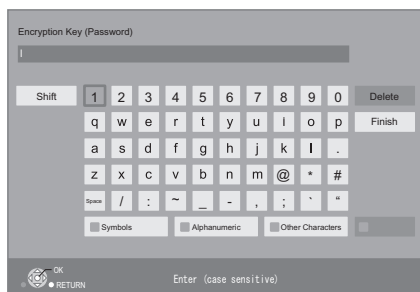

- Refer to the owner's manuals of the hub or router.
- Do not use this unit to connect to any wireless network for which you do not have usage rights. Using these networks may be regarded as illegal access.
- If you have trouble getting online on your PC after performing network settings on this unit, perform the network settings on your PC.
- Please be aware that connecting to a network without encryption may result in the leaking of data such as personal or secret information.

#### \* SSID:


An SSID (Service Set Identification) is a name used by wireless LAN to identify a particular network. Transmission is possible if the SSID matches for both devices.

## Firmware updates

Occasionally, Panasonic may release updated firmware for this unit that may add or improve the way a feature operates. These updates are available free of charge.


This unit is capable of checking the firmware automatically when connected to the Internet via a broadband connection.

When a new firmware version is available, the following message is displayed.

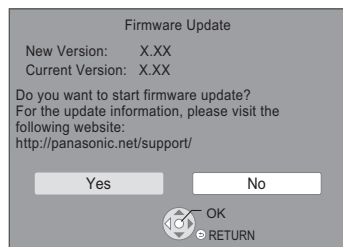


DO NOT DISCONNECT the unit from the AC power or perform any operation while the update is in process.

After the firmware is installed, "Fin" will be displayed on the unit's display. Unit will restart and the following screen will be displayed.

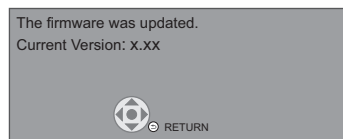

- If downloading on this unit fails or this unit is not connected to the Internet, then you can download the latest firmware from the following website and burn it to a CD-R to update the firmware.  
<http://panasonic.jp/support/global/cs/>  
(This site is in English only.)  
To show the firmware version on this unit. (⇒ 32, "Firmware Version Information")
- Downloading will require several minutes. It may take longer or may not work properly depending on the connection environment.
- If you do not want to check for the latest firmware version, set "Automatic Update Check" to "Off". (⇒ 32)

## Inserting or removing media

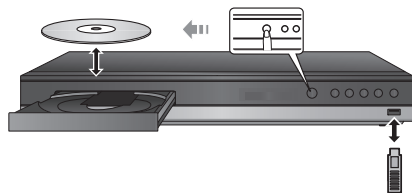

- When inserting a media item, ensure that it is facing the correct way, which is the right side facing up.

## Enjoying TV with the speakers of the system

Press [SELECTOR] several times to select the appropriate external input mode. (⇒ 16)

- Reduce the volume on the TV to its minimum, and then adjust the volume of the main unit.

# HOME menu

Major functions of this unit can be operated from the HOME menu.

## Preparation


Turn on the TV and select the appropriate video input.

### 1 Press [⏻] to turn on the unit.

- After network service introduction banner is shown, the HOME menu is displayed.  
–When connected to the network, the banner content may be changed.  
–You can disable the “Start-up Banner” (⇒ 31).
- If the HOME menu is not displayed, press [HOME].

### 2 Press [OK] or [▲, ▼, ◀, ▶] to select the item.

- If there are any other items, repeat this step.

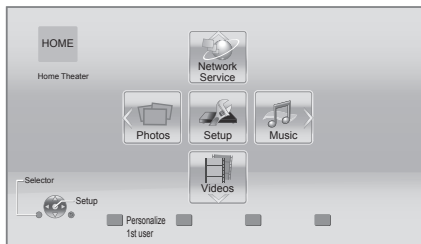

## Network Service

Displays the Home Screen of Network Service. (⇒ 24)

## Videos/Photos/Music

<b>Disc</b>	Play back the contents. (⇒ 18)
<b>USB</b>	<ul style="list-style-type: none"> <li>• When multiple contents are recorded, select the types of contents or the title.</li> </ul>

## Setup

<b>Settings</b>	(⇒ 27)
<b>USB Management</b>	(⇒ 19)
<b>Wallpaper</b>	Changes the background of HOME menu.

## To show the HOME menu

Press [HOME].

## Input selection

### 1 While displaying the HOME menu, press [OPTION].

### 2 Select the source and press [OK].

- When you want to output audio of an external device from this unit, select the terminal connected to the device.

<b>Bluetooth</b>	(⇒ 21)
<b>FM Radio</b>	(⇒ 23)
<b>AUX</b>	AUX terminal
<b>ARC</b>	HDMI AV OUT (ARC) terminal
<b>DIGITAL IN</b>	DIGITAL AUDIO IN terminal



- Items to be displayed may vary with the media.
- When the selector is switched, it may take time to play back the selected video and/or audio.
- Where necessary, set “Mixed Data Disc Option” when using a disc with both data files (MP3, JPEG, MKV, etc.) and Video (BD-AV and AVCHD). (⇒ 31)
- To save on electricity, this unit is turned off automatically if there is no button operation for about 30 minutes when not playing back (such as when paused or displaying the menu, displaying still pictures, etc.).




# Multi User Mode

Multi User Mode allows individuals to customize settings and switch to their saved settings easily. Up to four people can use the unit with their own settings.

The following settings can be personalized:

- The user icon
- The wallpaper of HOME menu
- The specific settings (⇒ 25, 27)

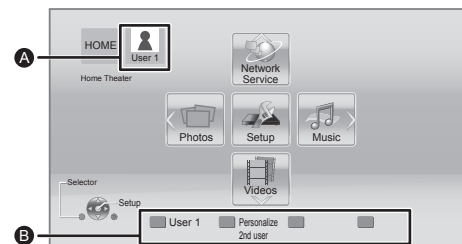

- A** The user name and icon currently selected
- B** Personalize a new user and switch between users with colored buttons.

## Personalizing a new user

- 1 Press [HOME].
- 2 Press the colored button that indicates new user personalization.
- 3 Select an item and change the settings according to the indications.

The following items can be set.

<b>Input Nickname</b>	Personalize a user name.
<b>Select Icon</b>	Personalize a user icon. <b>Select from Illustrations</b> The image can be selected from prepared illustrations. <b>Create from Photos</b> You can select a photo in recording media as an icon. (⇒ 25, "Icon Personalization")
<b>Select Wallpaper</b>	Personalize a background of the HOME menu. • In addition to the default wallpapers, you can select a photo in recording media as a wallpaper. (⇒ 25, "Wallpaper")

- 4 Select "Confirm" and press [OK].

**To change the personalized user information**  
 Select "Edit User Information" from Setup menu. (⇒ 31)

## Switching the user information

Press the colored buttons in the HOME menu to switch to the user information corresponding to the button.

# Playback

## 1 Insert the media.

Playback starts depending on the media.

## 2 Select the item to play and press [OK].

Repeat this step if necessary.



- DISCS CONTINUE TO ROTATE WHILE MENUS ARE DISPLAYED. Press [■STOP] when you have finished playback to protect the unit's motor, your TV screen and so on.
- It is not possible to play back AVCHD and MPEG2 videos which have been dragged and dropped or copied and pasted to the media.

## Operations during playback

The following functions may not work depending on the media and contents.

### Stop

Press [■STOP].

The stopping point is memorized.

#### Resume play function

Press [▶PLAY] to restart from this point.

- The point is cleared if the media is removed.
- **On BD-Video discs including BD-J, the resume play function does not work.**

### Pause

Press [⏸PAUSE].

- Press [⏸PAUSE] again or [▶PLAY] to restart play.

### Search/Slow motion

#### Search

While playing, press [SEARCH◀◀] or [SEARCH▶▶].

#### Slow motion

While paused, press [SEARCH▶▶].

The speed increases up to 5 steps.

- Music and MP3, etc.: The speed is fixed to a single step.
- Press [▶PLAY] to revert to normal playback speed.

### Skip

While playing or paused, press [◀◀] or [▶▶].

Skip to the title, chapter or track.

### Frame-by-frame

While paused, press [▶] (⏮).

- Press and hold to fast forward.
- Press [▶PLAY] to revert to normal playback speed.

### Changing audio

Press [AUDIO].

You can change the audio channel number or soundtrack language, etc.

## Show top menu/pop-up menu

Press [POP-UP MENU/TOP MENU].

Select the item and press [OK].

## Show the status messages

While playing, press [STATUS].

The status messages give you information about what is currently being played. Each time you press [STATUS], the display information may change or disappear from the screen.

- Depending on media and contents, the display may change or not appear.

e.g., BD-Video



**A** T: Title, C: Chapter, PL: Playlist

**B** Elapsed time in the title

**C** Current position

**D** Total time

e.g., JPEG

Date	11/12/2007	1 / 26
Size	500X375	
Manufacturer		
Equipment		

## Enjoying 3D video and photos

### Preparation

Connect this unit to a 3D compatible TV.

- Perform the necessary preparations for the TV.
- Play back following the instructions displayed on the screen.
- 3D Settings (⇒ 26, 28)



- Please refrain from viewing 3D images if you do not feel well or are experiencing visual fatigue. In the event that you experience dizziness, nausea, or other discomfort while viewing 3D images, discontinue use and rest your eyes.
- 3D video might not output the way it is set in "HDMI Resolution" and "24p Output" (⇒ 27).
- When playing back 3D photos from "Photos" screen, select from the "3D" list. (Still pictures in "2D" are played back in 2D.) If "2D" and "3D" indications are not displayed, press the red button on the remote control to switch the view of playback contents.

## Enjoying BD-Live

With "BD-Live" discs, you can enjoy bonus contents that use Internet access.

For this BD-Live function, connection of a USB device is necessary along with Internet connection.

### 1 Perform network connection and settings. (⇒ 12, 13)

- Use a LAN cable for a network connection.

### 2 Connect a USB device with 1 GB or more free space.

- The USB device is used as the local storage.

### 3 Insert the disc.

## Deleting data on the USB device

Select "USB Management" in the HOME menu (⇒ 16), then select "BD-Video Data Erase" and press [OK].



- The usable functions and the operating method may vary with each disc, please refer to the instructions on the disc and/or visit their website.
- "BD-Live Internet Access" may need to be changed for certain discs (⇒ 30).

## Slideshow

Play a slideshow of photos and adjust various settings during the playback.

- 1 Insert the media.
- 2 Select "Photos".
- 3 Select an item and press the green button.

The following items can be set.

<b>Start Slideshow</b>	Start the slideshow. You can display still pictures in the selected folder one by one at a constant interval.
<b>Display Interval</b>	Change the display interval.
<b>Transition Effect</b>	Select the effect when sliding pictures.
<b>Repeat Play</b>	Set whether to repeat the slideshow.



- Still pictures displayed as "  " cannot be played back with this unit.

## Enjoying Bluetooth®

**Panasonic bears no responsibility for data and/or information that is compromised during a wireless transmission.**

### ■ Restrictions of use

- All devices must conform to standards set by Bluetooth SIG, Inc.
- Usage with all Bluetooth® devices is not guaranteed.
- Depending on the specifications and settings of a device, it can fail to connect or some operations can be different.
- This system supports Bluetooth® security features. But depending on the operating environment and/or settings, this security is possibly not sufficient. Transmit data wirelessly to this system with caution.
- This system cannot transmit data to a Bluetooth® device.
- The environment, obstacles, and interference may shorten the communication range or cause incorrect operation, such as audio interruptions.
- Do not use this system near an equipment or in an environment that is sensitive to radio frequency interference (example: airports, hospitals, laboratories, etc).

## Bluetooth® operations

By using the Bluetooth® connection, you can listen to the sound from the Bluetooth® device wirelessly.

Refer to the owner's manual of the Bluetooth® device for details.

- If you intend to use an NFC (Near Field Communication)-compatible Bluetooth® device, proceed to "One-Touch Connection (Connecting by NFC)".

### 1 Turn on the Bluetooth® feature of the device.

### 2 Press [Ⓡ].

- If "Panasonic BTT" is displayed on the Bluetooth® menu of the device, go to step 4.

### 3 Press and hold [–PAIRING].

- "PAIRInG" will be displayed on the unit's display and the unit will enter pairing standby mode.



PAIRING

- If another Bluetooth® device is already connected, the connection will be terminated automatically.

### 4 Select "Panasonic BTT" from the Bluetooth® menu of the device.

- If another Bluetooth® device is already connected, disconnect it.
- "ConnECtEd" will be displayed on the unit's display and the connection will be established.



CONNECTED

### 5 Start play on the Bluetooth® device.



- If prompted for the passkey, input "0000".
- You can register up to 8 devices with this system. If a 9th device is paired, one of the other registered devices will be replaced.
- This system can only be connected to one device at a time.
- When "Bluetooth" is selected as the source, this system will automatically try and connect to the last connected Bluetooth® device. If the connection attempt fails, try to establish a connection again.
- If you switch the source, the Bluetooth® device will be disconnected.
- If the image and sound are out of sync during playback, restart the playback application you are using. If the problem persists, connect the Bluetooth® device and this unit with an audio cable.
- "Bluetooth Standby Mode" (⇒ 31)

## One-Touch Connection (Connecting by NFC)

### For NFC-compatible Android™ devices only (Android™ version 4.1 or higher)

Simply by touching an NFC-compatible Bluetooth® device on the unit, you can complete all preparations, from registering a Bluetooth® device to establishing a connection.

### 1 Turn on the NFC feature of the device.

### 2 Touch and hold your device on the NFC touch area of this unit. (⇒ 10)

- If the unit is in standby, it will turn on, and "nFC" will be displayed on the unit's display. Keep the device in contact with the unit.
- When the Bluetooth® device is paired and connected, "ConnECtEd" is displayed on the unit's display. Once the registration and connection of the Bluetooth® device is complete, move the device away from the unit.
- If "ConnECtEd" is not displayed, change the touching position.

### 3 Start play on the Bluetooth® device.



- When the connection is established, the playback may start automatically depending on the type of device being used.
- The One-Touch Connection may not work properly depending on the type of device being used.

## “HDMI CEC”

This unit supports “HDMI CEC” (Consumer Electronics Control) function.

See the owner’s manual for connected equipment for operational details.

### Preparation

Set “HDMI CEC” to “On” (⇒ 31).  
(The default setting is “On”.)

## Power on link

When the unit starts playback, the TV will automatically turn on and the screen of the unit will be displayed.

## Power Off Link

All connected “HDMI CEC” equipment automatically turns off when you switch the TV off.

### Playing music continuously even after turning off the TV

Select “Video” in “Power Off Link” (⇒ 31)




- The operation cannot be guaranteed on all HDMI CEC equipment.

## Enjoying TV with unit’s speakers

You can select whether audio is output from the unit’s speakers or the TV speakers by using the TV menu settings. Switch the audio output setting of the TV to this unit’s speakers.

### Select the TV audio

When the TV is turned on, this unit will also automatically turn on.

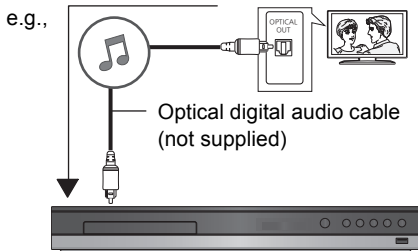

- ① While displaying the HOME menu, press [SETTINGS].
- ② Press [▲, ▼] to select “Audio” and press [OK].
- ③ Press [▲, ▼] to select “TV Audio Input”. and press [OK].
- ④ Press [▲, ▼] to switch “AUX”, “ARC” or “DIGITAL IN” and press [OK].
  - Select an audio input terminal connected to the unit.

# Listening to the Radio

You can preset up to 30 channels.

## Preparation

Press [SELECTOR] several times to select "rAdIo".



## Presetting stations automatically

- 1 Press and hold [STATUS] to select "LOWEst" or "CUrrEnt".



To begin auto preset with the lowest frequency (FM87.9).



To begin auto preset with the current frequency.\*

\* To change the frequency, refer to "Manual tuning and presetting".

- 2 Press and hold [OK].

Release the button when "AUtO" is displayed.



The tuner starts to preset all the stations it can receive into the channels in ascending order.

## Listening to a preset channel

Press the number buttons to select the channel.

e.g., 1: [1] ⇒ [OK].

12: [1] ⇒ [2].

Alternatively, press [^, v] or [▲, ▼].

## Manual tuning and presetting

Select a radio broadcast.

- ① Press [SEARCH◀◀] or [SEARCH▶▶] to select the frequency.
  - To start automatic tuning, press and hold [SEARCH◀◀], [SEARCH▶▶] until the frequency starts scrolling. Tuning stops when a station is found.

To preset the channel

- ② While listening to the radio broadcast Press [OK].
- ③ While "P" is flashing on the display Press the number buttons to select the channel.


# Network Service (Enjoying NETFLIX, etc.)

Network Service allows you to access some specific websites supported by Panasonic. This unit has no full browser function and all features of websites may not be available.

- Some services, such as NETFLIX require a registered account.  
For details of your NETFLIX account, refer to NETFLIX.

**Network Service provides a variety of selected Internet services such as the following.**

- Online movie rental service
- Video browsing service

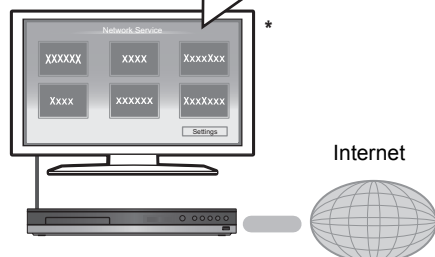

\* Images are for illustration purposes, contents may change without notice.

## Preparation

- Network connection (⇒ 12)
- Network settings (⇒ 13)

## 1 Press [INTERNET].

- NETFLIX can be accessed directly by pressing [NETFLIX] button.

## 2 Select the item and press [OK].

### To exit from Network Service

Press [HOME].




- When playing content in the media, Network Service cannot be accessed by pressing [INTERNET].
- In the following cases, settings are possible using the Setup menu items.
  - When restricting the use of Network Service (⇒ 30, "Network Service Lock")
  - When correcting the displayed time (⇒ 30, "Time Zone", "DST")
  - When using another device such as a smartphone in combination with the unit by using a certain app on the device (⇒ 30, "Remote Device Operation")
- When using Network Service, you cannot switch the source by pressing [SELECTOR] or [8] of the remote control or use One-Touch Connection with NFC.
- When using a slow Internet connection, the video may not be displayed correctly. A high speed Internet service with a speed of at least 6 Mbps is recommended.
- Be sure to update the firmware as soon as a firmware update notice is displayed on the screen. If the firmware is not updated, you may not be able to use Network Service function properly. (⇒ 14)
- Network Service Home Screen is subject to change without notice.
- The services through Network Service are operated by their respective service providers, and service may be discontinued either temporarily or permanently without notice. Therefore, Panasonic will make no warranty for the content or the continuity of the services.
- Some features of websites or content of the service may not be available.
- Some content may be inappropriate for viewers.
- Some content may only be available for specific countries and may be presented in specific languages.



# Option menu


A variety of playback operations and settings can be performed through this menu. Available options differ depending on the playing contents and the condition of the unit.

## About Multi User Mode

 : Settings of the items with this indication are saved by the respective users registered in the HOME menu. (⇒ 17)

### 1 Press [OPTION].

- When playing music, select “Playback Settings” and press [OK].  
e.g., BD-Video

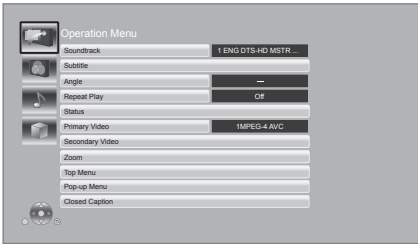

### 2 Select an item and change the settings.

#### To exit the screen

Press [OPTION].

Regarding Language: (⇒ 44)

## Operation Menu

### ■ Soundtrack

Show or change the soundtrack.

### ■ Audio channel

Select the audio channel number.

### ■ Subtitle

Change the subtitle settings.

### ■ Angle

Select the number of the angle.

### ■ Repeat Play

Select the item that you want to repeat.

- You can repeat the playback of a chapter, playlist, the entire disc, etc., but the items displayed will differ depending on the type of the media.
- Select “Off” to cancel.

### ■ Shuffle

Select whether or not to play randomly.

### ■ Start Slideshow

Start the slideshow.

### ■ Status

Show the status messages.

### ■ Rotate Right

### ■ Rotate Left

Rotate the still picture.

### ■ Wallpaper

Set the still picture to the wallpaper of HOME menu. (⇒ 16)

### ■ Icon Personalization

Set the still picture as your user icon. (⇒ 17)

### ■ Video

The recording method of original video appears.

### ■ Primary Video

The recording method of original primary video appears.

### ■ Secondary Video

Video	Select on/off for images. The recording method of original video appears. <ul style="list-style-type: none"><li>• During search/slow motion or frame-by-frame, only the primary video is displayed.</li></ul>
Soundtrack	Select on/off for audio and the language.

### ■ Zoom

Videos and pictures are magnified.

### ■ Top Menu

Display Top Menu.

### ■ Pop-up Menu

Display Pop-up Menu.

### ■ Menu

Display Menu.

### ■ Closed Caption (⇒ 29)

You can only set “Manual setting” and “CC Reset” in the Setup menu.

## Video Settings

### Picture Mode

Select the picture quality mode during play.

- If you select "User", you can change settings in "Picture Adjustment".

### Picture Adjustment

Specific picture quality settings can be changed.

### Progressive

Select the method of conversion for progressive output to suit the type of material being played.

- When the content is distorted, change the settings from "Auto" to "Video".

### 24p

Movies and other material recorded on DVD-Video at 24p are output at 24p.

- Only when you "24p Output" is set to "On" (⇒ 27).

### Reset to Default Video Settings

Return video settings to the factory defaults.

## Audio Settings

"Surround Effects" and "Sound Effects" can also be set by using the [SOUND] on the remote control.

### Surround Effects

Press [OK] to show the following settings:

#### BD/DVD (Multi-ch Source):

2ch Stereo	You can play any source in stereo. Sound will be output to the front speakers and the subwoofer only.
------------	---

#### TV/CD (2ch Source):

Multi Channel Out	You can enjoy sound from the front speakers, as well as the surround speakers even when playing stereo sources.
Dolby Pro Logic II Movie	Suitable for movie software, or the one recorded in Dolby Surround.
Dolby Pro Logic II Music	Adds 5.1-channel effects to stereo sources.

### Sound Effects

Press [OK] to show the following settings:

#### Equalizer

You can select sound quality settings.

#### Subwoofer

You can adjust the amount of bass.

**Level 1** (Weakest effect) to **Level 4** (Strongest effect)

- Levels can be set by source.

#### Whisper-Mode Surround

You can enhance the surround effect for low volume sound. (Convenient for late night viewing.)



- Not every effect can be set individually.
- The sound effects may not be available or have no effect with some sources.
- You may experience a reduction in sound quality when these sound effects are used with some sources. If this occurs, turn the sound effects off.

## 3D Settings

### Distance

Set the amount of depth perception.

### Pop-Out Level


3D position for the Option menu or message screen, etc. can be adjusted during 3D playback.

# Setup menu


Change the unit's settings if necessary. The settings remain intact even if you switch the unit to standby.

Some items are common to the Option menu. You can get the same effect with both menus.

## About Multi User Mode

 : Settings of the items with this indication are saved by the respective users registered in the HOME menu. (⇒ 17)

### 1 While displaying the HOME menu, press [SETTINGS].

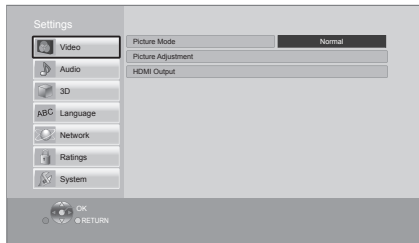

### 2 Select an item and change the settings.

#### To exit the screen

Press [HOME].

## Video

### ■ Picture Mode (⇒ 26)

### ■ Picture Adjustment (⇒ 26)

### ■ HDMI Output

Press [OK] to show the following settings:

#### ➤ HDMI Resolution

The items supported by the connected devices are indicated on the screen as “\*”. When any item without “\*” is selected, the images may be distorted.

- If “Auto” is selected, the best suited output resolution to the connected TV is automatically selected.
- To enjoy high-definition video up-converted to 1080p, you need to connect the unit directly to 1080p compatible HDTV (High Definition TV). If this unit is connected to an HDTV through other equipment, the other equipment must also be 1080p compatible.

#### ➤ 24p Output

When this unit is connected to a TV supporting 1080/24p output, movies and other material recorded at 24p\* are output at 24p.

- When playing DVD-Video, set to “On” and then set “24p” in “Video Settings” (⇒ 26) to “On”.
- When BD-Video/DVD-Video images other than 24p are played, images are output at 60p.

#### ➤ Deep Color Output

This setting is for selecting whether to use Deep Color Output when a TV that supports Deep Color is connected.

#### ➤ Contents Type Flag

Depending on the playback content, the TV will output adjusting to the optimal method when a TV that supports this function is connected.

\* A progressive image recorded at a rate of 24 frames per second (motion-picture film). Many BD-Video movie contents are recorded in 24 frames/second in accordance with the film materials.

## Audio

### ■ Surround Effects (⇒ 26)

### ■ Sound Effects (⇒ 26)

#### ■ Dynamic Range Compression

You can listen at low volumes but still hear dialogue clearly.

(Dolby Digital, Dolby Digital Plus and Dolby TrueHD only)

- “Auto” is effective only when playing Dolby TrueHD.

#### ■ Digital Audio Output

Press [OK] to show the following settings:

##### ➤ Dolby D/Dolby D +/Dolby TrueHD

##### ➤ DTS/DTS-HD

Select the audio signal to output.

- Select “PCM”, when the connected equipment cannot decode the respective audio format. This unit decodes the audio format and transmits to the connected equipment.
- If you do not make proper settings the audio may be static or noisy.

##### ➤ BD-Video Secondary Audio

Select whether or not to mix the primary and secondary audio (including the button click sound).

If “Off” is selected, the unit outputs the primary audio only.

##### ➤ HDMI Audio Output

This setting selects whether or not to output audio from HDMI.

#### ■ TV Audio Input

Select the TV audio input to work with the HDMI CEC operations.

#### ■ Downmix

Select the downmix system of multi-channel to 2-channel sound.

- Select “Surround encoded” to enjoy the surround sound.
- There is no downmix effect on the bitstream audio signal.
- The audio will be output in “Stereo” in the following cases:
  - AVCHD playback
  - Dolby TrueHD playback
  - Playback of secondary audio (including the button click sound).

#### ■ Audio Delay

Synchronization between picture and sound is corrected by adjusting the delay time of the audio output.

#### ■ Speaker

Press [OK] to show the following settings:

##### ➤ Speaker Distance

Set the distance between each speaker and the seating position.

- If you set “Test Tone” to “On”, each speaker will output a test signal sound in sequence.

##### ➤ Speaker Level

Set the volume of each speaker.

- If you set “Test Tone” to “On”, each speaker will output a test signal sound in sequence.

## 3D

#### ■ 3D BD-Video Playback

Select the playback method of 3D compatible video software.

#### ■ 3D Playback Precautions

Set to display or hide the 3D viewing warning screen when playing back the 3D compatible video software.

#### ■ Pop-Out Level (⇒ 26)

## Language

### ■ Audio Language

Choose the language for audio.

- If “Original” is selected, the original language of each disc will be selected.
- Enter a code (⇒ 44) when you select “Other \*\*\*\*”.

### ■ Subtitle Language

Choose the language for the subtitle.

- If “Auto” is selected and the language selected for “Audio Language” is not available, subtitles of that language will automatically appear if available on that disc.
- Enter a code (⇒ 44) when you select “Other \*\*\*\*”.

### ■ Menu Language

Choose the language for the disc menus.

- Enter a code (⇒ 44) when you select “Other \*\*\*\*”.

### ■ Subtitle Text

Select a desired item according to the language used for MKV subtitles text.

- This item is displayed only after playing back a file.

### ■ On-screen Language

Choose the language for menus and on-screen messages.

### ■ Closed Caption

Closed captioning services are dependent on contents, and the unit can display closed captions of both digital and analog types.

Press [OK] to show the following settings:

#### ➤ Closed Caption Display

Set whether or not to display closed captions.

#### ➤ Closed Caption Type

Select the closed caption type that matches the one of the content to be played back.

#### ➤ Analog CC

Select the channel of analog closed captions.

#### ➤ Digital CC

Select the channel of digital closed captions.

#### ➤ Manual setting

Set the display style of closed captions.

#### ➤ CC Reset

Restore the default “Closed Caption” settings.

## Network

### ■ Easy Network Setting (⇒ 13)

### ■ Network Settings

Perform network-related settings individually. Press [OK] to show the following settings:

#### ➤ LAN Connection Mode

Select the LAN connection method.

#### ➤ Wireless Settings

This allows the wireless router and connection settings to be set up. Current connection settings and connection state can be checked. Press [OK] to show the following settings:

#### Connection Setting

The wireless router connection wizard will be displayed.

#### Double Speed Mode Setting (2.4GHz)

Set the connection speed for a 2.4 GHz wireless format.

- If you connect using the “Double Speed Mode (40MHz)”, 2 channels use the same frequency band, and there is consequently a greater risk of reception interference. This can cause the connection speed to drop or become unstable.

#### ➤ IP Address/DNS Settings

This is for checking the state of the network connection and setting the IP address and DNS-related.

Press [OK] to show the respective setting.

#### ➤ Proxy Server Settings

This is for checking the state of connection with the Proxy server and performing settings. Press [OK] to show the respective setting.

## ➤ Network Service Settings (⇒ 24)

Press [OK] to show the following settings:

### Time Zone

Set the unit's time to match your location.

- Some Network Service contents require the time zone to be set. Set time zone if necessary.

### DST

Select "On" when using Daylight Saving time.

## ➤ Remote Device Settings (⇒ 24)

Press [OK] to show the following settings:

### Remote Device Operation

Enable to operate the unit by a smartphone, etc.

- If "On" is selected, "Quick Start" will be activated.

### Setting Unit Name

Set the name of this unit to be displayed on the connected equipment.

- **BTT466** **BTT465** : With the default setting, the unit name will be displayed as "SC-BTT465".

## ➤ BD-Live Internet Access (⇒ 19)

You can restrict Internet access when BD-Live functions are used.

- If "Allow ( Limited )" is selected, Internet access is permitted only for BD-Live contents which have content owner certificates.

## Ratings

The following items use the same password.  
Don't forget your password.

### ■ DVD-Video Ratings

Set a rating level to limit DVD-Video play.

### ■ BD-Video Ratings

Set an age limit of BD-Video play.

### ■ Network Service Lock

You can restrict the usage of Network Service.

## System

### ■ Easy Settings

You can execute basic settings.



### ■ Display Settings

Press [OK] to show the following settings:

#### ➤ TV Aspect

Set to match the type of TV connected.

When connected to a 4:3 aspect TV and playing 16:9 ratio image:

<b>4:3 Pan &amp; Scan</b>	The sides are cut off so the picture fills the screen. When playing BD-Video, video is output as "4:3 Letterbox".	
<b>4:3 Letterbox</b>	Black bands appear at the top and bottom of the picture.	

When connected to a 16:9 widescreen TV and playing 4:3 ratio image:

<b>16:9</b>	Video is displayed as a 4:3 ratio image in the center of the screen.
<b>16:9 Full</b>	Video is displayed as a horizontally stretched 16:9 image.

### ➤ Screen Saver Function

This is to prevent image retention on the screen.

- When this is set to "On":

If a list of playback content is displayed and there is no operation for 10 minutes or more, the screen switches to HOME menu automatically.

- While playing and pausing, etc., this function is not available.

---

### ➤ Status Messages

Choose whether to show status messages automatically.

---

### ➤ HDMI CEC

Set to use "HDMI CEC" function when connected via HDMI cable to a device that supports "HDMI CEC".

- Select "Off" when you do not want to use "HDMI CEC".

---

### ➤ Power Off Link

Select the desired power off link setting of this unit for "HDMI CEC" operation (⇒ 22). (This works depending on the settings of the connected "HDMI CEC" compatible equipment.)

#### Video/Audio

When the TV is turned off, this unit will turn off automatically.

#### Video

When playing back audio only content, the unit will not turn off automatically.

---

### ■ Unit Settings

Press [OK] to show the following settings:

---

#### ➤ Mixed Data Disc Option

Select the playback contents on discs with both data files and Video.

- If "MP3/JPEG/MKV" is selected, data file can be played back.
- If "BDAV/AVCHD" is selected, BDAV and AVCHD can be played back.

---

#### ➤ Front Panel Display

Changes the brightness of the unit's display.

- If "Auto" is selected, the display is set to bright and only dimmed during playback.

---

#### ➤ Edit User Information

Change the user information registered in the HOME menu.

---

### ■ Start-up Banner

Select whether to display the banner after turning on this unit. (⇒ 16)

---

### ■ Bluetooth Standby Mode

The unit turns on automatically from standby mode when you connect a registered Bluetooth® device.

---

## ■ Quick Start

Speed of start up from standby mode is increased.

- When set to “On”, the internal control unit will be powered and the idle power consumption will increase so compared to when set to “Off”.

---

## ■ Firmware Update (⇒ 14)

Press [OK] to show the following settings:

---

### ➤ Automatic Update Check

When this equipment remains connected to the Internet, it will check for the latest firmware version when it is turned on and you can update it if necessary.

---

### ➤ Update Now

You can update the firmware manually if a firmware update is available.

---

## ■ System Information

Press [OK] to show the following settings:

---

### ➤ License

Information about the software used by this unit is displayed.

---

### ➤ Firmware Version Information

Display firmware version of this unit and wireless LAN module.

---

## ■ Restore Default Settings

This returns all values in the Setup menu and the Option menu to the default settings, except for some settings of network, ratings, on-screen language, etc.

---



# Speaker installation option

Consult a qualified building contractor when attaching the speakers to a wall. Improper attachment may result in damage to the wall and speakers and personal injury.


## Attaching to a wall

You can attach all of the speakers (except subwoofer) to a wall.

- The wall or pillar on which the speakers are to be attached should be capable of supporting 10 kg (22 lbs) per screw.

### 1 Drive a screw (not supplied) into the wall.

- A** At least 30 mm (1 <sup>3</sup>/<sub>16</sub>" )
- B** Ø 4.0 mm (5/32")
- C** Ø 7.0 mm to Ø 9.4 mm (9/32" to 3/8")
- D** Wall or pillar
- E** 5.5 mm to 7.5 mm (7/32" to 5/16")

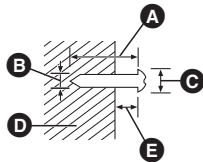

### 2 Fit the speaker securely onto the screw(s) with the hole(s).

e.g., Surround speaker	
DO NOT	DO
<ul style="list-style-type: none"> <li>In this position, the speaker will likely fall if moved to the left or right.</li> </ul>	<ul style="list-style-type: none"> <li>Move the speaker so that the screw is in this position.</li> </ul>


## Screwing positions on the wall

Use the measurements indicated below.

- Leave at least 20 mm (25/32") of space above the speaker and 10 mm (13/32") on each side to allow enough space for fitting the speaker.

### CENTER


- A** 14 mm (9/16")
- B** 65 mm (2 9/16")
- C** 175 mm (6 29/32")

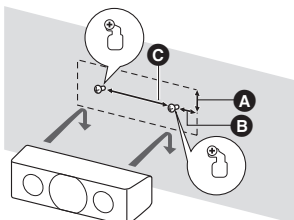


### BTT466 BTT465 FRONT

Attach to a wall without the base and the stand.


- Before using the speaker cable, remove it from the stand by pulling it out.

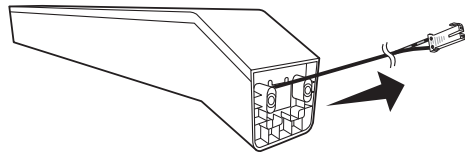

- D** 45 mm (1 25/32")
- E** 53 mm (2 3/32")
- F** 266 mm (10 1/2")

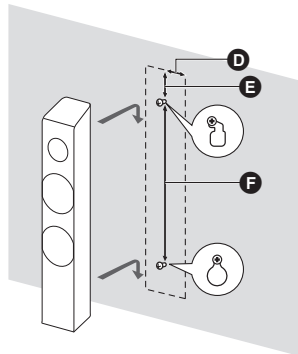


- Reattaching the speaker cable to the stand  
Straighten the cable and run through the stand. Pull out the cable through the hole.

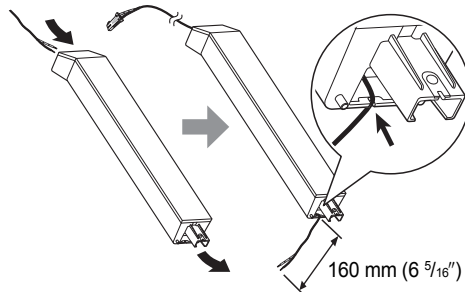

### BTT466 BTT465 SURROUND BTT405 FRONT, SURROUND

- G** 42 mm (1 21/32")
- H** 45 mm (1 25/32")

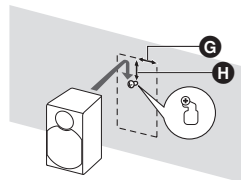

## To prevent tipping/falling of the speakers


### Secure the speaker.

Using the tie down area on the rear of the speaker and a cord (not supplied), secure the speaker to a wall anchor (not supplied) permanently attached to the wall.

#### 1 Thread a cord to the speaker.


- Use a cord of less than  $\varnothing 2.0 \text{ mm}$  ( $3/32''$ ), which is capable of supporting over 10 kg (22 lbs).

e.g., **BTT466** **BTT465** Front speaker

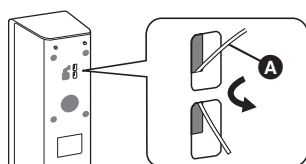

**A** Cord (not supplied)

#### 2 Thread a cord from the wall to the speaker and tie tightly.

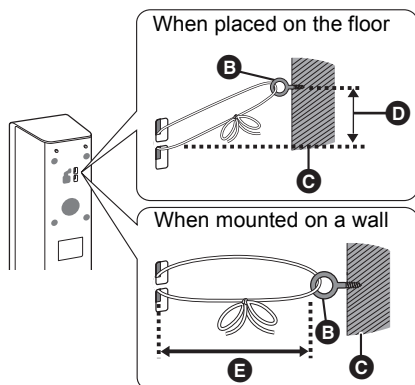

**B** Wall anchor (not supplied)

**C** Wall or pillar

**D** Approx. 150 mm (6")

**E** Approx. 100 mm (4")

# Troubleshooting guide

Before requesting service, please perform the following steps.

## ■ Unit does not respond to remote control or unit's buttons.

Disconnect AC power supply cord, wait 1 minute, then reconnect AC power supply cord.

### Do you have the latest firmware installed?

Panasonic is constantly improving the unit's firmware to ensure that our customers are enjoying the latest technology. (⇒ 14)



### Make the following checks and visit our website for more information.

[www.panasonic.com/support](http://www.panasonic.com/support)

Enter the model number.



### Or visit our website to find a service center.

You can find a service center near you easily on our website.

### Other support information:

"Customer Services Directory (United States and Puerto Rico)" (⇒ 47).

## The following do not indicate a problem with this unit:

- Regular disc rotating sounds.
- Image disturbance during search.
- Image disturbance when replacing 3D discs.

## ■ Cannot eject disc.

- ① Turn the unit on.
- ② Press and hold [OK], the yellow button and the blue button on the remote control at the same time for more than 5 seconds.  
– "00rEt" is displayed on the unit's display.
- ③ Press [▶] (right) repeatedly on the remote control until "06FtO" is displayed on the unit's display.
- ④ Press [OK].

## General operation

### To return to the factory defaults.

- Select "Yes" in "Restore Default Settings" in the Setup menu. (⇒ 32)

### To return all settings to the factory preset.

- Reset the unit as follows:
  - ① Turn the unit on.
  - ② Press and hold [OK], the yellow button and the blue button on the remote control at the same time for more than 5 seconds.  
– "00rEt" is displayed on the unit's display.
  - ③ Press [▶] (right) repeatedly on the remote control until "08FIn" is displayed on the unit's display.
  - ④ Press and hold [OK] for at least 5 seconds.

### The remote control does not work properly.

- Change the batteries in the remote control. (⇒ 9)
- Depending on the condition of the unit, [SELECTOR] and [⊗] may not respond. Display the HOME menu and try again.

### The TV tuner mode is not displayed when the TV is turned on.

- This phenomenon may occur, depending on the TV setting, when "Quick Start" is set to "On".

### You have forgotten your ratings password. You want to cancel the ratings level.

- The ratings level returns to the factory defaults.
  - ① Turn the unit on.
  - ② Press and hold [OK], the yellow button and the blue button on the remote control at the same time for more than 5 seconds.  
– "00rEt" is displayed on the unit's display.
  - ③ Press [▶] (right) repeatedly on the remote control until "03 VL" is displayed on the unit's display.
  - ④ Press [OK].

### The TV screen turns black.

- When "24p Output" is set to "On", HDMI authentication takes place and a black screen is displayed.

---

### This unit does not recognize the USB connection correctly.

- Disconnect and re-connect the USB cable. If it still does not recognize the connection, turn this unit off and on again.
- USB devices may not be recognized by this unit when connected using the following :
  - a USB hub
  - a USB extension cable other than the supplied with the Wireless LAN Adaptor DY-WL5 (optional)
- If you connect USB HDD to this unit, use the USB cable that is supplied with the HDD.

---

### The unit switches to standby mode.

- This unit will automatically turn to standby mode after 30 minutes if it is inactive. (⇒ 16)
- When the time set for the sleep timer has passed, the main unit will be turned off. (⇒ 9)
- One of the unit's safety devices is activated. Press [⏻/I] on the main unit to turn the unit on.

## Picture

### The images from this unit do not appear on the TV.

#### Picture is distorted.

#### Jittering occurs.

- An incorrect resolution is selected in "HDMI Resolution". Reset the setting as follows:
  - ① Turn the unit on.
  - ② Press and hold [OK], the yellow button and the blue button on the remote control at the same time for more than 5 seconds.
    - "00rEt" is displayed on the unit's display.
  - ③ Press [▶] (right) repeatedly on the remote control until "04PrG" is displayed on the unit's display.
  - ④ Press and hold [OK] for at least 5 seconds. Set the item again. (⇒ 27)
    - When Dolby Digital Plus, Dolby TrueHD, and DTS-HD® audio are not output properly, select "Yes" in "Restore Default Settings" (⇒ 32) and make proper settings.
- When "3D BD-Video Playback" in the Setup menu is set to "Auto", images may not be output depending on the connection method. After removing the disc from this unit, select "Set before play" in the Setup menu, and select "2D Playback" in the setup screen displayed when playing 3D discs. (⇒ 28)
- If irregular coloring occurs on your TV, turn the TV off for about 30 minutes. If it persists, move the speakers further away from the TV.

**Video is not output in high-definition.**

- Confirm that "HDMI Resolution" in the Setup menu is set properly. (⇒ 27)

---

**3D video is not output.**

- Connect to a full high-definition TV.
- Are the settings on this unit and the TV correct? (⇒ 19)
- Depending on the connected TV, the video being played back might switch to 2D video due to changes in resolution etc. Check the 3D setting on the TV.
- Check that proper HDMI video input is selected on the TV.

---

**3D video is not output correctly as 2D.**

- Select "Set before play" in the Setup menu, and select "2D Playback" in the setup screen displayed when playing 3D discs. (⇒ 28, "3D BD-Video Playback")
- Discs that have recorded titles with Side by side (2 screen structure) and that can be enjoyed in 3D are played back in accordance with the settings of the TV.

---

**Closed captions are not displayed.**

- Confirm that the source content supports CC.
- Confirm the "Closed Caption Display" is set to "On". (⇒ 25, 29)
- Change the "Closed Caption Type" setting. (⇒ 25, 29)
- Confirm the "Analog CC" or "Digital CC" is set properly (⇒ 25, 29).

---

**A black band is displayed around the edge of the screen.****The aspect ratio of the screen is abnormal.**

- Confirm the "TV Aspect" is set properly. (⇒ 30)
- Adjust the aspect setting on the TV.

## Audio

**No sound.****Low volume.****Distorted sound.****Cannot hear the desired audio type.**

- Check connections to speakers and other equipment.
- Ensure the speaker settings for your speakers are correct. (⇒ 28)
- To output audio from a device connected with an HDMI cable, set "HDMI Audio Output" to "On" in the Setup menu. (⇒ 28)
- When "BD-Video Secondary Audio" is set to "On", Dolby TrueHD, Dolby Digital Plus, DTS-HD Master Audio™ and DTS-HD High Resolution Audio™ are output as DTS Digital Surround™.
- Depending on the connected equipment, the sound may be distorted if this unit is connected with an HDMI cable.
- The multi-channel audio from a device connected to the TV is not output in its original multi-channel form.
  - If the device has an optical audio output terminal, connect the device to this unit's DIGITAL AUDIO IN terminal. (⇒ 11)

---

**No surround sound.**

- Press [SOUND] to select a surround effect. (⇒ 26)

---

**Cannot switch audio.**

- When audio is output from the HDMI AV OUT terminal, set "Dolby D/Dolby D +/Dolby TrueHD" or "DTS/DTS-HD" to "PCM". (⇒ 28)

---

**No sound from the TV.**

- Press [SELECTOR] to select the corresponding source. (⇒ 15)
- Check whether the HDMI terminal on the TV is labeled "HDMI (ARC)". If not labeled in this way, connect using the HDMI cable in combination with an optical digital audio cable.
- If there is no sound from the equipment connected to this unit's DIGITAL AUDIO IN terminal, please make sure that the optical audio output of the equipment is set to PCM.

## Playback

### **Disc cannot be played.**

- The disc is dirty. (⇒ 6)
- The disc is not finalized. (⇒ 8)
- Confirm the "Mixed Data Disc Option" is set properly. (⇒ 31)

---

### **Still pictures (JPEG) do not play back normally.**

- The images that were edited on the PC, such as Progressive JPEG, etc., may not be played back.

---

### **I can't play back BD-Live.**

- Confirm that this unit is connected to the broadband Internet. (⇒ 12)
- Confirm the "BD-Live Internet Access" settings. (⇒ 30)
- Confirm a USB device is connected to the USB port. (⇒ 15)
- Connect this unit to the network by a wired connection.

---

### **Alternative soundtrack and subtitles cannot be selected.**

- The languages are not recorded on the disc.
  - You may not be able to use the Option menu to change the soundtrack and subtitles on some discs. Use the disc's menus to make changes. (⇒ 19)
- 

## Bluetooth®

### **Pairing cannot be done.**

- Check the Bluetooth® device condition.

---

### **The device cannot be connected.**

- Try pairing the device again.
- This system might be connected to a different device. Disconnect the other device and try pairing the device again.

---

### **The device is connected but audio cannot be heard through this system.**

- For some built-in Bluetooth® devices, you have to set the audio output to "Panasonic BTT" manually. Read the owner's manual for the device for details.

---

### **The sound is interrupted.**

- The communication range is 10 m (33 ft.). Bring the Bluetooth® device closer to the main unit.
- Other devices that use the 2.4 GHz frequency band (wireless router, microwaves, cordless phones, etc.) are interfering. Bring the Bluetooth® device closer to the main unit and distance it from the other devices.

---

### **The One-Touch Connection (NFC feature) is not working.**

- Turn on the NFC feature of the device.
  - Depending on the condition of the unit, the NFC touch area may not respond. Display the HOME menu and try again.
  - Depending on the device, the NFC feature may not function correctly. In such cases, start up the Bluetooth® feature of the device to set up a connection with it.
-

## Radio

### **Distorted sound or noise is heard.**

- Adjust the position of the antenna.

### **A beat sound is heard.**

- Try to keep a certain amount of distance between the antenna and the TV.

### **Stations cannot be selected.**

- Press and hold [SELECTOR].

After a few seconds the display changes to show the current lowest frequency (87.9 MHz). Continue to hold the button down. The lowest frequency changes (87.5 MHz) and the step is changed.

### **Noise is excessive.**

- Change the audio to be output as monaural. Press [AUDIO] to select "MnO".



The sound becomes monaural.

- To cancel, press the button again or change the frequency.

In normal circumstances, select "AUtO StErEO".



## Network

### **I can't connect to the network.**

- Confirm the network connection and settings. (⇒ 12, 13, 29)
- There may be interference that prevents the unit from detecting your home network. Place the unit and the wireless router closer to each other. This unit may be able to detect your network name (⇒ 14, "SSID").
- Check the owner's manual for each device and connect accordingly.

### **When using wireless LAN connection, video frames are dropped during playback.**

- Higher transfer rate router such as 802.11n (2.4 GHz) wireless router may solve the problem. If you use 802.11n (2.4 GHz) wireless router, it is necessary to set the encryption type to "AES". Simultaneous use with a microwave, cordless telephone etc. at 2.4 GHz may result in connection interruptions or other problems.
- On the "Wireless Settings" screen (⇒ 29), the continuous lighting of at least 4 "Reception" indicators is the target for a stable connection. If 3 or fewer indicators are lit or the connection is being interrupted, change the position or angle of your wireless router and see if the connection state improves. If there is no improvement, connect to a wired network and perform the "Easy Network Setting" (⇒ 13) again.

## Messages on the screen

### Cannot play.

- You inserted an incompatible disc (Discs recorded in PAL video, etc.).

### Cannot display on this unit.

- You tried to play a non-compatible image.
- Re-insert the media.

### No disc inserted.

- The disc may be upside down.

### ⊘ This operation is not available.

- Some operations are unsupported by the unit. (For example, reverse slow motion, etc.)

### IP address is not set.

- The "IP Address" in "IP Address/DNS Settings" is "---. ---. ---. ---". Set the "IP Address", "Subnet Mask", and "Default Gateway". (Select the automatic address acquisition if necessary.)

### The current wireless network security setting is weak. It is recommended to change to a stronger security setting.

- Set a stronger network security level referring to the wireless router owner's manual.

## Messages on the unit's display

### U59

- Temperature of this unit is hot and the unit switches to standby for safety reasons. Wait for about 30 minutes until the message disappears.  
Install or place this unit with good ventilation.

### H□□ or F□□

("□" stands for a number.)

- Check and correct the speaker cable connections.
- There is something unusual.
- Check the unit using the troubleshooting guide. If the service number remains displayed, do the following.
  - ① Disconnect the plug from the AC outlet, wait a few seconds, then reconnect it.
  - ② Press [⏻/I] to turn the unit on.

If the service number remains displayed despite doing the above, request service from the dealer. Inform the dealer of the service number when requesting service.



## Unit's display list

This list only contains displays that are difficult to read.

Display	Reading	Display	Reading
bYE	BYE	OPEn	OPEN
rEAd	READ	PLAy	PLAY
StOP	STOP	SEtUP	SETUP
PhoTo	PHOTO	SLIdE	SLIDE
dISC	DISC	USb	USB
AUX	AUX	ARc	ARC
d-In	D-IN	FM	FM
BLUETOOTH	BLUETOOTH	SEtOK	SET OK
TUNEd STEREO	TUNED STEREO	nEt	NET
		FIn	FIN (Finish)
Error	ERROR	----	No DISC, No PLAY, No READ, UNSUPPORT
MUTE	MUTE		

# Specifications

## GENERAL

Power consumption	<b>BTT466</b> <b>BTT465</b> Approx. 85 W <b>BTT405</b> Approx. 54 W
Power consumption in standby mode	Approx. 0.5 W
Power supply	AC 120 V, 60 Hz
Dimensions (W×H×D)	430 mm × 55 mm × 322 mm (16 <sup>15</sup> / <sub>16</sub> " × 2 <sup>3</sup> / <sub>16</sub> " × 12 <sup>1</sup> / <sub>16</sub> " )
Mass (Weight)	<b>BTT466</b> <b>BTT465</b> Approx. 2.7 kg (6 lbs) <b>BTT405</b> Approx. 2.6 kg (5.8 lbs)
Operating temperature range	0 °C to 40 °C (32 °F to 104 °F)
Operating humidity range	35 % to 80 % RH (no condensation)
LASER Specification	<b>Class I LASER Product</b> <b>Wave length:</b> 790 nm (CDs)/ 658 nm (DVDs)/405 nm (BDs) <b>Laser power:</b> No hazardous radiation is emitted with the safety protection

## AMPLIFIER SECTION

<b>RMS TOTAL POWER OUTPUT</b> <b>BTT466</b> <b>BTT465</b>	1000 W 1 kHz, 30 % total harmonic distortion FRONT: 167 W per ch (4 Ω) CENTER: 167 W (4 Ω) SURROUND: 167 W per ch (4 Ω) 55 Hz, 30 % total harmonic distortion SUBWOOFER: 167 W (4 Ω)
<b>RMS TOTAL POWER OUTPUT</b> <b>BTT405</b>	600 W 1 kHz, 30 % total harmonic distortion FRONT: 100 W per ch (4 Ω) CENTER: 100 W (4 Ω) SURROUND: 100 W per ch (4 Ω) 55 Hz, 30 % total harmonic distortion SUBWOOFER: 100 W (4 Ω)

<b>FTC TOTAL POWER OUTPUT</b> <b>BTT466</b> <b>BTT465</b>	430 W 300 Hz to 20 kHz, 1.0 % total harmonic distortion FRONT: 55 W per ch (4 Ω) (LR both channels driven) CENTER: 80 W (4 Ω) SURROUND: 80 W per ch (4 Ω) 40 Hz to 90 Hz, 1.0 % total harmonic distortion SUBWOOFER: 80 W (4 Ω)
<b>FTC TOTAL POWER OUTPUT</b> <b>BTT405</b>	240 W 300 Hz to 20 kHz, 1.0 % total harmonic distortion FRONT: 30 W per ch (4 Ω) (LR both channels driven) CENTER: 45 W (4 Ω) SURROUND: 45 W per ch (4 Ω) 40 Hz to 90 Hz, 1.0 % total harmonic distortion SUBWOOFER: 45 W (4 Ω)
Audio Input	AUX × 1
Digital Audio Input	Optical × 1 <b>Sampling frequency:</b> 32 kHz, 44.1 kHz, 48 kHz <b>Audio Format:</b> PCM, Dolby Digital, DTS®

## SPEAKER SECTION

	Woofer CONE TYPE	Full range CONE TYPE	Super tweeter Piezo type
<b>BTT466</b> <b>BTT465</b>			
<b>Front</b>	—	6.5 cm (2 1/2")	×1
<b>Center</b>	—	6.5 cm (2 1/2")	×2
<b>Surround</b>	—	6.5 cm (2 1/2")	×1
<b>Subwoofer</b>	16 cm (6 1/2")	—	—
<b>BTT405</b>			
<b>Front</b>	—	6.5 cm (2 1/2")	×1
<b>Center</b>	—	6.5 cm (2 1/2")	×2
<b>Surround</b>	—	6.5 cm (2 1/2")	×1
<b>Subwoofer</b>	16 cm (6 1/2")	—	—

	Dimensions (W×H×D)	Mass (Weight)
<b>BTT466</b> <b>BTT465</b>		
<b>Front</b>	270 mm×1181 mm×270 mm (10 5/8"×46 1/2"×10 5/8")	Approx. 2.7 kg (5.96 lbs)
<b>Center</b>	304 mm×87 mm×77 mm (11 31/32"×3 7/16"×3 1/32")	Approx. 0.7 kg (1.55 lbs)
<b>Surround</b>	83 mm×141 mm×75 mm (3 9/32"×5 9/16"×2 15/16")	Approx. 0.5 kg (1.11 lbs)
<b>Subwoofer</b>	156 mm×290 mm×263 mm (6 9/32"×11 13/32"×10 11/32")	Approx. 3.4 kg (7.50 lbs)
<b>BTT405</b>		
<b>Front</b>	83 mm×141 mm×75 mm (3 9/32"×5 9/16"×2 15/16")	Approx. 0.5 kg (1.11 lbs)
<b>Center</b>	304 mm×87 mm×77 mm (11 31/32"×3 7/16"×3 1/32")	Approx. 0.7 kg (1.55 lbs)
<b>Surround</b>	83 mm×141 mm×75 mm (3 9/32"×5 9/16"×2 15/16")	Approx. 0.5 kg (1.11 lbs)
<b>Subwoofer</b>	156 mm×290 mm×263 mm (6 9/32"×11 13/32"×10 11/32")	Approx. 3.4 kg (7.50 lbs)

- The impedance of all the speakers is 4 Ω.

## TERMINAL SECTION

<b>USB slot</b>	USB2.0 1 system
<b>Ethernet</b>	10BASE-T/100BASE-TX 1 system

## Bluetooth® SECTION

<b>Bluetooth®</b>	Version 4.0
	Class 2
	2.4 GHz Band FH-SS
	<b>Supported Profile:</b> A2DP/AVRCP
	<b>Supported Codec:</b> SBC/AAC

## FM TUNER SECTION

<b>Frequency range</b>	87.9 MHz to 107.9 MHz (200 kHz step), 87.5 MHz to 108.0 MHz (100 kHz step)
<b>Antenna terminals</b>	1 with Antenna Cable (1.2 m)

## VIDEO SECTION

<b>Signal system</b>	NTSC
<b>HDMI AV output*</b>	Output connector: Type A (19 pin) 1 system

\* This unit supports "HDMI CEC" function.

Specifications are subject to change without notice.

## File format

File format	Extension	Reference
<b>MKV</b>	“.MKV”, “.mkv”	<ul style="list-style-type: none"> <li>The video file and subtitles text file are inside the same folder, and the file names are the same except for the file extensions.</li> <li>Some MKV files may not be played back correctly, depending on the video resolution, frame rate condition, subtitle format and so on.</li> </ul>
	Subtitles text file “.SRT”, “.srt”, “.SSA”, “.ssa”, “.ASS”, “.ass”	
<b>mp4</b> (H.264+AAC)	“.MP4”, “.mov”	Some mp4/MPEG files may not be played back correctly, depending on the video resolution, frame rate condition and so on.
<b>MPEG</b> (TS/PS)	“.mpg”, “.mpeg”, “.m2ts”, “.mts”, “.ts”	
<b>JPEG</b>	“.JPG”, “.jpg”, “.jpeg”	<ul style="list-style-type: none"> <li>MOTION JPEG and Progressive JPEG are not supported.</li> <li>You may not be able to play back the file if you have edited the folder structure or the file name on a PC or other device.</li> </ul>
<b>MP3</b>	“.MP3”, “.mp3”	This unit supports ID3 tags, but only titles, artist names and album names can be displayed.
<b>FLAC</b>	“.FLAC”, “.flac”	Maximum sampling rate: 192 kHz/24 bit
<b>WAV</b>	“.WAV”, “.wav”	Maximum sampling rate: 192 kHz/24 bit
<b>MPO</b>	“.MPO”, “.mpo”	3D still picture
<b>AAC</b>	“.M4A”, “.m4a”, “.AAC”, “.aac”	This unit supports ID3 tags. Maximum sampling rate: 48 kHz/320 kbps
<b>WMA</b>	“.WMA”, “.wma”	This unit supports ID3 tags. Maximum sampling rate: 48 kHz/355 kbps

- With certain recording states and folder structures, the play order may differ or playback may not be possible.

## Display languages list

Display Language	Display Language	Display Language
ENG English	JPN Japanese	ARA Arabic
FRA French	CHI Chinese	HIN Hindi
DEU German	KOR Korean	PER Persian
ITA Italian	MAL Malay	IND Indonesian
ESP Spanish	VIE Vietnamese	MRI Maori
NLD Dutch	THA Thai	BUL Bulgarian
SVE Swedish	POL Polish	RUM Romanian
NOR Norwegian	CES Czech	GRE Greek
DAN Danish	SLK Slovak	TUR Turkish
POR Portuguese	HUN Hungarian	* Others
RUS Russian	FIN Finnish	

## Language code list

Language	Code	Language	Code	Language	Code
Abkhazian:	6566	Gujarati:	7185	Rhaeto-Romance:	
Afar:	6565	Hausa:	7265		8277
Afrikaans:	6570	Hebrew:	7387	Romanian:	8279
Albanian:	8381	Hindi:	7273	Russian:	8285
Amharic:	6577	Hungarian:	7285	Samoa:	8377
Arabic:	6582	Icelandic:	7383	Sanskrit:	8365
Armenian:	7289	Indonesian:	7378	Scots Gaelic:	7168
Assamese:	6583	Interlingua:	7365	Serbian:	8382
Aymara:	6589	Irish:	7165	Serbo-Croatian:	8372
Azerbaijani:	6590	Italian:	7384	Shona:	8378
Bashkir:	6665	Japanese:	7465	Sindhi:	8368
Basque:	6985	Javanese:	7487	Singhalese:	8373
Bengali; Bangla:		Kannada:	7578	Slovak:	8375
	6678	Kashmiri:	7583	Slovenian:	8376
Bhutani:	6890	Kazakh:	7575	Somali:	8379
Bihari:	6672	Kirghiz:	7589	Spanish:	6983
Breton:	6682	Korean:	7579	Sundanese:	8385
Bulgarian:	6671	Kurdish:	7585	Swahili:	8387
Burmese:	7789	Laotian:	7679	Swedish:	8386
Byelorussian:	6669	Latin:	7665	Tagalog:	8476
Cambodian:	7577	Latvian, Lettish:	7686	Tajik:	8471
Catalan:	6765	Lingala:	7678	Tamil:	8465
Chinese:	9072	Lithuanian:	7684	Tatar:	8484
Corsican:	6779	Macedonian:	7775	Telugu:	8469
Croatian:	7282	Malagasy:	7771	Thai:	8472
Czech:	6783	Malay:	7783	Tibetan:	6679
Danish:	6865	Malayalam:	7776	Tigrinya:	8473
Dutch:	7876	Maltese:	7784	Tonga:	8479
English:	6978	Maori:	7773	Turkish:	8482
Esperanto:	6979	Marathi:	7782	Turkmen:	8475
Estonian:	6984	Moldavian:	7779	Tw:	8487
Faroeese:	7079	Mongolian:	7778	Ukrainian:	8575
Fiji:	7074	Nauru:	7865	Urdu:	8582
Finnish:	7073	Nepali:	7869	Uzbek:	8590
French:	7082	Norwegian:	7879	Vietnamese:	8673
Frisian:	7089	Oriya:	7982	Volapük:	8679
Galician:	7176	Pashto, Pushto:	8083	Welsh:	6789
Georgian:	7565	Persian:	7065	Wolof:	8779
German:	6869	Polish:	8076	Xhosa:	8872
Greek:	6976	Portuguese:	8084	Yiddish:	7473
Greenlandic:	7576	Punjabi:	8065	Yoruba:	8979
Guarani:	7178	Quechua:	8185	Zulu:	9085

"AVCHD" is a trademark of Panasonic Corporation and Sony Corporation.

Java is a registered trademark of Oracle and/or its affiliates.

Manufactured under license from Dolby Laboratories. Dolby, Pro Logic, and the double-D symbol are trademarks of Dolby Laboratories.

For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS Licensing Limited. DTS, DTS-HD, the Symbol, & DTS and the Symbol together are registered trademarks, and DTS-HD Master Audio | Essential is a trademark of DTS, Inc. © DTS, Inc. All Rights Reserved.

HDMI, the HDMI Logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

This product is licensed under the AVC patent portfolio license and VC-1 patent portfolio license for the personal and non-commercial use of a consumer to (i) encode video in compliance with the AVC Standard and VC-1 Standard ("AVC/VC-1 Video") and/or (ii) decode AVC/VC-1 Video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed to provide AVC/VC-1 Video. No license is granted or shall be implied for any other use. Additional information may be obtained from MPEG LA, LLC. See <http://www.mpegla.com>.

MPEG Layer-3 audio coding technology licensed from Fraunhofer IIS and Thomson.

"DVD Logo" is a trademark of DVD Format/Logo Licensing Corporation.

"Wi-Fi", "Wi-Fi Protected Setup", "WPA" and "WPA2" are marks or registered marks of the Wi-Fi Alliance.

The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Panasonic Corporation is under license.

Other trademarks and trade names are those of their respective owners.

Android is a trademark of Google Inc.

Copyright 2004-2013 Verance Corporation. Cinavia™ is a Verance Corporation trademark. Protected by U.S. Patent 7,369,677 and worldwide patents issued and pending under license from Verance Corporation. All rights reserved.

This product incorporates the following software:

- (1) the software developed independently by or for Panasonic Corporation,
- (2) the software owned by third party and licensed to Panasonic Corporation,
- (3) the software licensed under the GNU General Public License, Version 2.0 (GPL V2.0),
- (4) the software licensed under the GNU LESSER General Public License, Version 2.1 (LGPL V2.1), and/or
- (5) open source software other than the software licensed under the GPL V2.0 and/or LGPL V2.1.

The software categorized as (3) - (5) are distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY, without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. Please refer to the detailed terms and conditions thereof shown in the Settings menu.

At least three (3) years from delivery of this product, Panasonic will give to any third party who contacts us at the contact information provided below, for a charge no more than our cost of physically performing source code distribution, a complete machine-readable copy of the corresponding source code covered under GPL V2.0, LGPL V2.1 or the other licenses with the obligation to do so, as well as the respective copyright notice thereof.

Contact Information: [oss-cd-request@gg.jp](mailto:oss-cd-request@gg.jp), [panasonic.com](http://panasonic.com)

The source code and the copyright notice are also available for free in our website below.

<http://panasonic.net/avc/oss/theater/AWTHT14A.html>

#### (1) MS/WMA

This product is protected by certain intellectual property rights of Microsoft Corporation and third parties. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft or an authorized Microsoft subsidiary and third parties.

#### (2) MS/PlayReady/Final Product Labeling

This product contains technology subject to certain intellectual property rights of Microsoft. Use or distribution of this technology outside of this product is prohibited without the appropriate license(s) from Microsoft.

#### (3) MS/PlayReady/End User Notices

Content owners use Microsoft PlayReady™ content access technology to protect their intellectual property, including copyrighted content. This device uses PlayReady technology to access PlayReady-protected content and/or WMDRM-protected content. If the device fails to properly enforce restrictions on content usage, content owners may require Microsoft to revoke the device's ability to consume PlayReady-protected content. Revocation should not affect unprotected content or content protected by other content access technologies. Content owners may require you to upgrade PlayReady to access their content. If you decline an upgrade, you will not be able to access content that requires the upgrade.

#### (4) Vorbis, FLAC, WPA Supplicant

The software licenses are displayed when "License" in the Setup menu is selected. (⇒ 32)



CAUTION- VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN. DO NOT STARE INTO BEAM.	
	FDA21CFR / CLASS II (Ia)
CAUTION- CLASS 2 VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN. DO NOT STARE INTO BEAM.	
	IEC60825-1 / CLASS 2
ATTENTION- RAYONNEMENT LASER VISIBLE ET INVISIBLE CLASSE 2, EN CAS D'OUVERTURE, NE PAS REGARDER DANS LE FAISCEAU.	

(Inside of product)

**Contains FCC ID : ZVA04**

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines. This equipment has very low levels of RF energy that is deemed to comply without maximum permissive exposure evaluation (MPE).

**FCC Note:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: To assure continued compliance, follow the attached installation instructions and use only shielded interface cables when connecting to peripheral devices.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Declaration of Conformity

Trade Name: Panasonic

Model No.: SC-BTT405

SC-BTT465

SC-BTT466

Responsible Party:

Panasonic Corporation of North America

Two Riverfront Plaza, Newark, NJ 07102-5490

Support Contact: <http://www.panasonic.com/contactinfo>

# Limited Warranty

## Panasonic Products Limited Warranty

### Limited Warranty Coverage (For USA and Puerto Rico Only)

If your product does not work properly because of a defect in materials or workmanship, Panasonic Corporation of North America (referred to as "the warrantor") will, for the length of the period indicated on the chart below, which starts with the date of original purchase ("warranty period"), at its option either (a) repair your product with new or refurbished parts, (b) replace it with a new or a refurbished equivalent value product, or (c) refund your purchase price. The decision to repair, replace or refund will be made by the warrantor.

Product or Part Name	Parts	Labor
Blu-ray Disc Home Theater Sound System	1 Year	90 Days
All included Accessories (Except Non-Rechargeable Batteries)	90 Days	Not Applicable
Only Non-Rechargeable Batteries	10 Days	Not Applicable

During the "Labor" warranty period there will be no charge for labor. During the "Parts" warranty period, there will be no charge for parts. This Limited Warranty excludes both parts and labor for non-rechargeable batteries, antennas, and cosmetic parts (cabinet). This warranty only applies to products purchased and serviced in the United States or Puerto Rico. This warranty is extended only to the original purchaser of a new product which was not sold "as is".

### Mail-In Service—Online Repair Request

#### Online Repair Request

To submit a new repair request and for quick repair status visit our Web Site at [www.panasonic.com/repair](http://www.panasonic.com/repair).

When shipping the unit, carefully pack, include all supplied accessories listed in the Owner's Manual, and send it prepaid, adequately insured and packed well in a carton box. When shipping Lithium Ion batteries please visit our Web Site at [www.panasonic.com/BatteryHandling](http://www.panasonic.com/BatteryHandling) as Panasonic is committed to providing the most up to date information. Include a letter detailing the complaint, a return address and provide a daytime phone number where you can be reached. A valid registered receipt is required under the Limited Warranty.

**IF REPAIR IS NEEDED DURING THE WARRANTY PERIOD, THE PURCHASER WILL BE REQUIRED TO FURNISH A SALES RECEIPT/ PROOF OF PURCHASE INDICATING DATE OF PURCHASE, AMOUNT PAID AND PLACE OF PURCHASE. CUSTOMER WILL BE CHARGED FOR THE REPAIR OF ANY UNIT RECEIVED WITHOUT SUCH PROOF OF PURCHASE.**

### Limited Warranty Limits And Exclusions

This warranty ONLY COVERS failures due to defects in materials or workmanship, and DOES NOT COVER normal wear and tear or cosmetic damage. The warranty ALSO DOES NOT COVER damages which occurred in shipment, or failures which are caused by products not supplied by the warrantor, or failures which result from accidents, misuse, abuse, neglect, mishandling, misapplication, alteration, faulty installation, set-up adjustments, misadjustment of consumer controls, improper maintenance, power line surge, lightning damage, modification, introduction of sand, humidity or liquids, commercial use such as hotel, office, restaurant, or other business or rental use

The model number and serial number of this product can be found on either the back or the bottom of the unit. Please note them in the space provided below and keep for future reference.

MODEL NUMBER \_\_\_\_\_

SERIAL NUMBER \_\_\_\_\_

### User memo:

DATE OF PURCHASE \_\_\_\_\_

DEALER NAME \_\_\_\_\_

DEALER ADDRESS \_\_\_\_\_

TELEPHONE NUMBER \_\_\_\_\_

of the product, or service by anyone other than a Factory Service Center or other Authorized Servicer, or damage that is attributable to acts of God.

**THERE ARE NO EXPRESS WARRANTIES EXCEPT AS LISTED UNDER "LIMITED WARRANTY COVERAGE".**

**THE WARRANTOR IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY.** (As examples, this excludes damages for lost time, travel to and from the servicer, loss of or damage to media or images, data or other memory or recorded content. The items listed are not exclusive, but for illustration only.) **ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.**

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the exclusions may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state. If a problem with this product develops during or after the warranty period, you may contact your dealer or Service Center. If the problem is not handled to your satisfaction, then write to the warrantor's Consumer Affairs Department at the addresses listed for the warrantor.

**PARTS AND SERVICE, WHICH ARE NOT COVERED BY THIS LIMITED WARRANTY, ARE YOUR RESPONSIBILITY.**

### Customer Services Directory (United States and Puerto Rico)

Obtain Product Information and Operating Assistance; locate your nearest Dealer or Service Center; purchase Parts and Accessories; or make Customer Service and Literature requests by visiting our Web Site at: <http://www.panasonic.com/support> or, contact us via the web at: <http://www.panasonic.com/contactinfo>

For hearing or speech impaired TTY users, TTY: 1-877-833-8855

### Accessory Purchases (United States and Puerto Rico)


Purchase Parts, Accessories and Owner's Manual online for all Panasonic Products by visiting our Web Site at: <http://www.pstc.panasonic.com> Or, send your request by E-mail to: [nccparts@us.panasonic.com](mailto:nccparts@us.panasonic.com) You may also contact us directly at: 1-800-237-9080 (Fax Only) (Monday-Friday 9am-9pm EST) Panasonic National Parts Center 20421 84th Avenue South, Kent, WA 98032 (We accept Visa, MasterCard, Discover Card, American Express)

For hearing or speech impaired TTY users, TTY: 1-866-605-1277

As of November 2013

# Index

<b>A Audio</b>		<b>Language</b>		<b>Q Quick Start</b>	32
Changing audio	18	Audio	29	<b>R Radio</b>	23
Language	29, 44	Menu	29	Repeat play	25
<b>B BD-Live</b>	19	On-screen	29	Restore Default	
Bluetooth®	20	Soundtrack	25	Settings	32
<b>C Closed Caption</b>	25, 29	Subtitle	25, 29	Resume play function	18
<b>F File format</b>	44	<b>M Multi User Mode</b>	17	<b>S Subtitle</b>	25, 29
Firmware update	14	<b>N Network</b>		<b>U USB device</b>	8
<b>H HDMI CEC</b>	22	Connection	12	<b>W Wireless LAN</b>	12
<b>L LAN</b>	12	Setting	13, 29	24p	26, 27
		<b>Network Service</b>	24	3D	19
		<b>NFC</b>	21		
		<b>P Pop-up menu</b>	19		

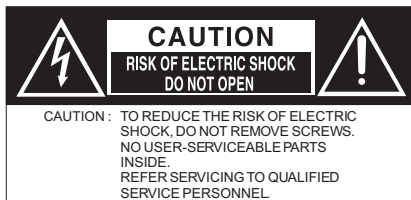

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



Panasonic Corporation of North America

Two Riverfront Plaza, Newark, NJ 07102-5490

<http://www.panasonic.com>

© Panasonic Corporation 2014

Printed in China



72-BT465P-370B4

VQT5F60-2  
F0114YS2034

En