





 
 
 






SAMSUNG
TV
UE 65 NU 7405 UXXC

Mandis Shop S.L.
Sant Cugat del Vallès - Barcelona
info@mandis.es

Layout Keys	Direct	Shift	Layout Keys	Direct	Shift
	POWER		P/Ch + 	CH+	
MUTE	MUTE		P/Ch - 	CH-	
1 <small>..?</small>	1		VOL +	VOL+	
2 <small>ABC</small>	2		VOL -	VOL-	
3 <small>DEF</small>	3			UP	
4 <small>GHI</small>	4			DOWN	
5 <small>JKL</small>	5		OK	OK	
6 <small>MNO</small>	6			LEFT	
7 <small>PQRS</small>	7			RIGHT	
8 <small>TUV</small>	8		MENU	MENU	
9 <small>WXYZ</small>	9		EXIT RETURN	BACK	
0/10 	0		 TOP MENU	EXTRA / 123	
1.  GUIDE	GUIDE		PICT TITLE	RGYB	
2.  FAV	EXTRA / 123		 EPG		
 AUTO/TRK					
 SUBT					
AV Dvd/Tv	SOURCE		 ZOOM		
					
TEXT			RED 		
TV			GREEN 		
 BACK	BACK		YELLOW 	PLAY/PAUSE	
			BLUE 