
 
 
 
 
 
 

 
 
 




 
 
 
 
 

 
 
 
 


 

 

 
 
 




 
 


 





 



 

 

 
 
 

 

 

 






Original	Replacement	Original	Replacement
	Power		Green / APP / Repeat
	DTV		Yellow / YouTube / Repeat
	TV		Blue / Prime Video / Random
	AV		Vol+
	1		Info / Angle
	2		CH+ / Page+
	3		Vol-
	4		Mute / Dimmer
	5		CH- / Page-
	6		Guide / EPG / -/--
	7		Setup / OPT /
	8		Up
	9		Left
	Text		OK
	0		Right
	PRE-CH		Down
	Red		Menu / Home
	Shift + TV/Radio / Program		Green / APP / Repeat
	TV/Radio /		Yellow / YouTube / Repeat
	AV / Input / RDS		Blue / Prime Video / Random
	1		Vol+
	2		Info / Angle
	3		CH+ / Page+
	4		Vol-
	5		Mute / Dimmer
	6		CH- / Page-
	7		Guide / EPG / -/--
	8		Setup / OPT /
	9		Up
	Text / Goto		Left
	0		OK
	Back / Return		Right
	Red / Netflix / Search		Down
			Menu / Home



