







 



 























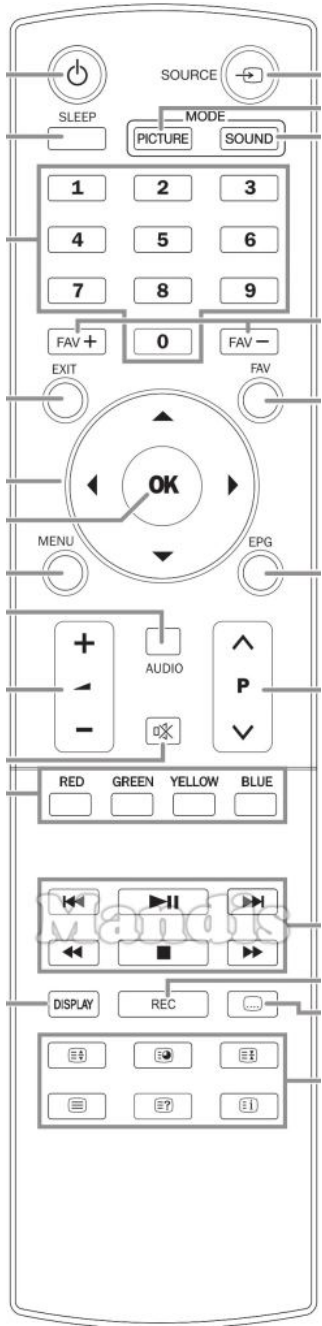




Original	Replacement
	 Power
	 AV / Input / RDS
	 Sleep / Timer
	 Picture / Format
	 Sound / Title
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Shift + Up
	 0
	 Shift + Down

Original	Replacement
	 Exit / Cancel / Clear
	 Up
	 Fav / Marker / PC
	 Left
	 OK
	 Right
	 Menu / Home
	 Down
	 Guide / EPG / -/--
	 Vol+
	 Audio / Lang I/II
	 CH+ / Page+
	 Vol-
	 Mute / Dimmer
	 CH- / Page-
	 Red / Netflix / Search
	 Green / APP / Repeat





Original	Replacement
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 I<<	 I<< / Preset-
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 >>I	 >>I / Preset+
 <<	 << / Tune-
 Stop	 Stop / Hold
 >>	 >> / Tune+
 Display	 Display / Media
 Rec	 Rec / Rec Mode
 [...]	 Subtitle / EQ
 [≡◆]	 Zoom / Size
 [≡○]	 Eject / Surround
 [≡+]	 Shift + Hold / Stop /
 [≡]	 Text / Goto
 [≡?]	 Info / Angle

Original	Replacement
 [≡i]	 Smart / List

