























 



 

 



 

 



 



 



 



 

 



 



 









Original		Replacement		Original		Replacement	
	Power		Power		9		9
	PRO/TV/TXT		TV/Radio /		FAV		Fav / Marker / PC
	Slow/Cancel		Shift + Play /		0		0
	Rep/Reveal		Shift + Back / Return		Recall		Back / Return
	TV/AV		AV / Input / RDS		Vol+		Vol+
	<</Hold		<< / Tune-		CH+		CH+ / Page+
	>>/Size		>> / Tune+		Up		Up
	l<</Subpage		l<< / Preset-		Left		Left
	>>l/Index		>>l / Preset+		OK		OK
	1		1		Right		Right
	2		2		Vol-		Vol-
	3		3		Down		Down
	4		4		CH-		CH- / Page-
	5		5		Menu		Menu / Home
	6		6		Exit		Exit / Cancel / Clear
	7		7		Nicam/A2		Text / Goto
	8		8		Display		Display / Media





	Original	Replacement
	Mute	 Mute / Dimmer
	Picture	 Picture / Format
	Sound	 Sound / Title
	Sleep	 Sleep / Timer
	Subtitle	 Subtitle / EQ
	LAN/EPG	 Audio / Lang I/II
	Pause	 Pause / Step / Freeze
	Play	 Play / Slow
	Set/CH/List	 Setup / OPT /
	D-Menu/List	 D.Menu / Top
	Stop	 Stop / Hold
	Record	 Rec / Rec Mode
	Open/Close	 Eject / Surround
	Red/Zoom	 Red / Netflix / Search
	Green/Goto	 Green / APP / Repeat
	Yellow/Title	 Yellow / YouTube / Repeat
	Blue/Angle/Screen	 Blue / Prime Video / Random

Original	Replacement

