







 

 

 

 

 





 




 





 





 







 



 



 















Original		Replacement		Original		Replacement	
	Power		Power		Recall		Back / Return
	Mute		Mute / Dimmer		Display		Display / Media
	Nicam/A2		Shift + Audio / Lang I/II		Freeze		Pause / Step / Freeze
	Aspect		Shift + Picture / Format		Rec/Auto		Rec / Rec Mode
	P.Mode		Picture / Format		Red		Red / Netflix / Search
	S.Mode		Sound / Title		Green		Green / APP / Repeat
	1		1		Yellow		Yellow / YouTube / Repeat
	2		2		Blue		Blue / Prime Video / Random
	3		3		Sleep		Sleep / Timer
	4		4		Up		Up
	5		5		Source		AV / Input / RDS
	6		6		Left		Left
	7		7		Enter		OK
	8		8		Right		Right
	9		9		Down		Down
	-/-		Shift + Guide / EPG / -/-		Menu		Menu / Home
	0		0		Exit		Exit / Cancel / Clear



