



 






Original	Replacement	Original	Replacement
	Power		Power
	Source		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	[TV]		TV/Radio /
	Internet		Smart / List
	↔		Fav / Marker / PC
	Mute		Mute / Dimmer
	Vol+		Vol+

Original	Replacement	Original	Replacement
	Vol-		Vol-
	P+		CH+ / Page+
	P-		CH- / Page-
	OK		OK
	Menu		Menu / Home
	Back		Back / Return
	Exit		Exit / Cancel / Clear
	Q.Menu		D.Menu / Top
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	i		Info / Angle
	EPG		Guide / EPG / -/-
	TXT		Text / Goto
	Lang.		Audio / Lang I/II
	Subt.		Subtitle / EQ





Original	Replacement	Original	Replacement
	Red  Red / Netflix / Search		
	[>]  Picture / Format		
	[+]  Zoom / Size		
	Green  Green / APP / Repeat		
	Yellow  Yellow / YouTube / Repeat		
	*1/O  Shift + 1		
	*2/Q  Shift + 2		
	Blue  Blue / Prime Video / Random		
	Rec  Rec / Rec Mode		
	Play  Play / Slow		
	Pause  Pause / Step / Freeze		
	>>  >> / Tune+		
	<<  << / Tune-		
	Stop  Stop / Hold		

