 







 



 





 









 



 





 




 


 

 

 



 
 
 


 












Original	Replacement	Original	Replacement
 Power	 Power	 0	 0
 Setup	 Setup / OPT /	 Movie	 Display / Media
 DTV	 D.Menu / Top	 Music	 Smart / List
 1	 1	 Photo	 Picture / Format
 2	 2	 Vol-	 Vol-
 3	 3	 Vol+	 Vol+
 HDMI/AV	 AV / Input / RDS	 Up	 Up
 4	 4	 Left	 Left
 5	 5	 Enter	 OK
 6	 6	 Right	 Right
 Disc	 Shift + 3	 Exit	 Exit / Cancel / Clear
 7	 7	 Down	 Down
 8	 8	 Home	 Menu / Home
 9	 9	 Edit	 Back / Return
 Rec	 Rec / Rec Mode	 Copy	 Shift + Smart / List
 EPG	 Guide / EPG / -/--	 Repeat	 Green / APP / Repeat
 TTX	 Text / Goto	 <<	 << / Tune-





Original	Replacement		
PLAY/PAUSE	Play/Pause	▶ SLOW	Play / Slow
⏪	I<<	◀ PRESET-	I<< / Preset-
⏩	>>	TUNE+ ▶	>> / Tune+
⏹	Stop	■ HOLD	Stop / Hold
▶▶	>>	▶▶ PRESET+	>> / Preset+
AUDIO	Audio	LANG I/II AUDIO	Audio / Lang I/II
SUB-T	Sub-T	EQ SUBTITLE	Subtitle / EQ
FAV	FAV	PC FAV MARKER	Fav / Marker / PC
INFO	Info	ANGLE INFO	Info / Angle
MUTE	Mute	DIMMER MUTE	Mute / Dimmer
DVD	DVD	SHIFT + DVD 2	Shift + 2
TIMER	Timer	TIMER SLEEP	Sleep / Timer
T/R	T/R	SIZE ZOOM	Zoom / Size

Original	Replacement

