 



 



 



































 
 






 



 



 









 





 







 
 
 
 
 

 

 

 

 
 
 
 


 



Original	Replacement	Original	Replacement
 Standby	 Power	 Pause	 Pause / Step / Freeze
 Open/Close	 Eject / Surround	 >>	 >> / Preset+
 Standby Tv	 Shift + Power	 <<	 << / Tune-
 1	 1	 Stop	 Stop / Hold
 2	 2	 Play	 Play / Slow
 3	 3	 >>	 >> / Tune+
 4	 4	 Tv Vol+	 Vol+
 5	 5	 Tv Mute	 Mute / Dimmer
 6	 6	 Tv Prog+	 CH+ / Page+
 7	 7	 Tv Vol-	 Vol-
 8	 8	 Tv Prog-	 CH- / Page-
 9	 9	 Menu	 Menu / Home
 Cancel	 Shift + Exit / Cancel / Clear	 Return	 Back / Return
 0	 0	 Up	 Up
 Tv Input Sel.	 AV / Input / RDS	 Left	 Left
 I<<	 I<< / Preset-	 OK	 OK
 Slow	 Shift + Play / Slow	 Right	 Right

Slow





Original	Replacement
 Down	 Down
 Disc Menu	 D.Menu / Top
 Info	 Info / Angle
 Exit	 Exit / Cancel / Clear
 PopUp Menu/Title Menu	 Sound / Title
 PopUp Menu/Title Menu	 Smart / List
 PopUp Menu/Title Menu	 Shift + D.Menu / Top Menu
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Repeat	 Shift + Green / APP / Repeat
 A-B Repeat	 Shift + Yellow / YouTube / Repeat
 Marker	 Fav / Marker / PC
 Bonusview	 Display / Media

Original	Replacement

