



Original	Replacement	Original	Replacement
	Power		Mute
	Tv/DTV		Mute / Dimmer
	Source		Vol-
	1		CH- / Page-
	2		Guide / EPG / -/--
	3		Menu / Home
	4		Smart / List
	5		Setup / OPT /
	6		Up
	7		Shift + Back / Return
	8		Left
	9		OK
	-/--		Right
	0		Info / Angle
	Pre-CH		Down
	Vol+		Exit / Cancel / Clear
	CH+ / Page+		Red / Netflix / Search
			Green / APP / Repeat





Original	Replacement	Original	Replacement
	Yellow Yellow / YouTube / Repeat		
	Blue Blue / Prime Video / Random		
	TTX/MIX Text / Goto		
	P.Size Zoom / Size		
	DMA Display / Media		
	E.Mode D.Menu / Top		
	3D Shift + 3		
	Subt. Subtitle / EQ		
	<< << / Tune-		
	Pause Pause / Step / Freeze		
	>> >> / Tune+		
	Rec Rec / Rec Mode		
	Play Play / Slow		
	Stop Stop / Hold		

