






 
























 







Original	Replacement
	 Power
	 Mute / Dimmer
	 1
	 2
	 3
	 Eject / Surround
	 4
	 5
	 6
	 Shift + Text /
	 7
	 8
	 9
	 0
	 Menu / Home
	 AV / Input / RDS
	 Up

Original	Replacement
	 Left
	 OK
	 Right
	 Down
	 D.Menu / Top
	 Exit / Cancel / Clear
	 Vol+
	 Sound / Title
	 CH- / Page-
	 Vol-
	 Picture / Format
	 CH+ / Page+
	 Sleep / Timer
	 Shift + Picture / Format
	 Setup / OPT /
	 Shift + Back / Return
	 Text / Goto





	Original	Replacement	
	EPG	Guide / EPG / -/--	
	Play	Play / Slow	
	Pause	Pause / Step / Freeze	
	Stop	Stop / Hold	
	FAV	Fav / Marker / PC	
	Info	Info / Angle	
	Red/DVD/USB	Red / Netflix / Search	
	Green/Title	Green / APP / Repeat	
	Yellow/PBC	Yellow / YouTube / Repeat	
	Blue/Angle	Blue / Prime Video / Random	
	<<	<< / Tune-	
	>>	>> / Tune+	
	l<<	l<< / Preset-	
	>>l	>>l / Preset+	
	Return	Back / Return	
	Display	Display / Media	
	DVD Audio	Audio / Lang I/II	

	Original	Replacement	
	Subtitle	Subtitle / EQ	
	Reveal	+  Shift + Exit / Cancel / Clear	
	Hold	+  Shift + Stop /	
	List	Smart / List	
	Index	TV/Radio /	
	Subpage	+  Shift + Smart / List	
	Size	Zoom / Size	
	Mix	+  Shift + Display / Media	
	Freeze	+  Shift + Pause / Step /	

