

 

 


 
 
 
 
 
 
 
 

 
 

 
 
 



 

 

 



 




Original	Replacement
 Power	 Power
 Off Timer	 Sleep / Timer
 Input Tv	 Shift + AV / Input / RDS
 Input Av	 AV / Input / RDS
 Audio	 Audio / Lang I/II
 Aspect	 Picture / Format
 N	 Shift + Up
 oo/Surround	 Sound / Title
 Info	 Info / Angle
 Exit	 Exit / Cancel / Clear
 Menu	 Menu / Home
 Media Player	 Display / Media
 Up	 Up
 Guide	 Guide / EPG / -/--
 Left	 Left
 Ok	 OK
 Right	 Right

Original	Replacement
 Option	 Setup / OPT /
 Down	 Down
 ←/Back/Return	 Back / Return
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Text	 Text / Goto
 Sttl	 Subtitle / EQ
 Index	 Smart / List
 Hold	 Shift + Stop /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6





Original	Replacement
7	7
8	8
9	9
Mute	Mute / Dimmer
0	0
↔/Last View	Shift + Back / Return
Vol +	Vol+
Pr +	CH+ / Page+
Vol -	Vol-
Pr -	CH- / Page-
Power ↓	Shift + Power
Programme ▼	Shift + CH- /
Programme ▲	Shift + CH+ /
I<<	I<< / Preset-
Play	Play / Slow
I>>	>>I / Preset+
Stop	Stop / Hold

Original	Replacement
Pause/Still	Pause / Step / Freeze
Rec	Rec / Rec Mode

