






 



 


 
 

 
 

 
 




 
 

 









Original	Replacement
 Power	 Power
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 TV	 TV/Radio /
 0	 0
 Recall	 Shift + Back / Return
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 PR+	 CH+ / Page+

Original	Replacement
 Vol-	 Vol-
 i/Info	 Info / Angle
 PR-	 CH- / Page-
 MENU	 Menu / Home
 Up	 Up
 Q.Menu	 D.Menu / Top
 Left	 Left
 OK	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 World	 Smart / List
 Music Photo	 Picture / Format
 Guide	 Guide / EPG / -/-
 */o	 Display / Media
 */o..	 Shift + Display / Media





	Original	Replacement		Original	Replacement
	≡/Text	 Text / Goto			
	Red	 Red / Netflix / Search			
	Green	 Green / APP / Repeat			
	Yellow	 Yellow / YouTube / Repeat			
	Blue	 Blue / Prime Video / Random			
	Lang	 Audio / Lang I/II			
	[≡]..	 Shift + Text /			
	[-O-]	 Setup / OPT /			
	<<	 << / Tune-			
	Pause	 Pause / Step / Freeze			
	>>	 >> / Tune+			
	Rec	 Rec / Rec Mode			
	Play	 Play / Slow			
	Stop	 Stop / Hold			

