




 

 




 
 

 

 

 

 

 


 
 

 



 

 

 

 

 


 

 

 



 

 



 




















Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Source/Rec		AV / Input / RDS
	0		0
	Timer		Sleep / Timer
	Menu Disc		Setup / OPT /
	Up		Up
	CH+		CH+ / Page+
	Menu System		Menu / Home
	Left		Left
	OK		OK
	Right		Right
	Edit		Text / Goto
	CH-		CH- / Page-
	Down		Down
	Select		Display / Media
	Stop		Stop / Hold
	Play		Play / Slow
	Rec		Rec / Rec Mode
	I<<		I<< / Preset-
	Pause		Pause / Step / Freeze
	Top Menu		D.Menu / Top
	>>I		>>I / Preset+
	Audio		Audio / Lang I/II
	T/C		Picture / Format
	Return		Back / Return





Original	Replacement	Original	Replacement
ANGLE 	ANGLE Info / Angle 		
TV/DVD 	LIST SMART Smart / List 		
CLEAR 	EXIT CANCEL Exit / Cancel / Clear 		
REC MODE 	SHIFT + REC MODE Shift + Rec / Rec Mode 		
SUBTITLE 	EQ SUBTITLE Subtitle / EQ 