

 

 





 

 


 
 
 







 
 


 














Original	Replacement
 Standby/On	 Power
 DVD/CD	 +  Shift + 3
 DVD/CD	 +  Shift + 2
 Tuner/FM/AM	 +  Shift + 6
 TV	 +  Shift + 1
 Line/L1/L2	 +  Shift + 4
 Display	 Display / Media
 Pause	 Pause / Step / Freeze
 Open/Close	 Eject / Surround
 <</<I/<I	 << / Tune-
 Play	 Play / Slow
 II>/I>/>>	 >> / Tune+
 I<<	 I<< / Preset-
 Stop	 Stop / Hold
 >>I	 >>I / Preset+
 DVD Menu	 D.Menu / Top
 Up/Tune+	 +  Shift + >> / Tune+


















 









 



 

 



Tune+

Original	Replacement
 Up/Tune+	 Up
 Return	 Back / Return
 Left/ST-	 Left
 Enter	 OK
 Right/ST+	 Right
 Mute	 Mute / Dimmer
 Down/Tune-	 +  Shift + << /
 Down/Tune-	 Down
 Sound	 Sound / Title
 Volume	 Vol+
 Volume Master-	 Vol-
 CH+ Tv Control	 +  Shift + CH+ /
 Power Tv Control	 +  Shift + Power
 Vol+ Tv Control	 +  Shift + Vol+
 CH- Tv Control	 +  Shift + CH- /
 Input Tv Control	 +  Shift + AV / Input / RDS
 Vol- Tv Control	 +  Shift + Vol-





Original	Replacement
 Auto	 Smart / List
 Bass Mode	 +  Shift + Subtitle / EQ
 Dialogue	 +  Shift + Audio / Lang I/II
 Surround	 +  Shift + Eject / Surround
 Virtual SB	 AV / Input / RDS
 Advanced	 Picture / Format
 Program	 TV/Radio /
 Audio	 Audio / Lang I/II
 Repeat	 Green / APP / Repeat
 Subtitle	 Subtitle / EQ
 Random	 Blue / Prime Video / Random
 Angle	 Info / Angle
 1	 1
 Zoom	 Zoom / Size
 2	 2
 Top Menu	 +  Shift + D.Menu / Top Menu
 3	 3

Original	Replacement
 Home Menu	 Menu / Home
 4	 4
 System Setup	 Setup / OPT /
 5	 5
 Test Tone	 Text / Goto
 6	 6
 CH Level	 +  Shift + Smart / List
 7	 7
 Dimmer	 +  Shift + Mute / Dimmer
 8	 8
 Quiet/Midnight	 +  Shift + Sleep / Timer
 9	 9
 Timer/Clock	 Sleep / Timer
 CLR	 Exit / Cancel / Clear
 0	 0
 Folder-	 CH- / Page-
 Folder+	 CH+ / Page+





