





 

 

 

 
 


 


 







Original	Replacement
 Power	 Power
 Sleep	 Sleep
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 SHIFT + -/-- Shift + Guide
 Recall	 RETURN BACK Back
 Source	 TIMER AV AV
 P.STD	 HOME SMART Smart

Original	Replacement
 S.STD	 APP MEDIA Media
 MENU/ATV	 TOP MENU MENU Menu
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 OK	 OK Ok
 Vol+	 + VOL Vol +
 Vol-	 VOL - Vol -
 PR-	 CH - Ch -
 PR+	 + CH Ch +
 Freeze	 II Pause
 Info/Display	 DISPLAY INFO Info
 Menu/DVB	 E-MANUAL D.MENU D. Menu
 TTX [.]≡/TTX	 REPEAT TEXT Text
 I/II	 SOUND DUAL Dual
 [≡x]/Exit	 CLEAR EXIT Exit





	Original	Replacement	Original	Replacement
	[≡◆]/EPG	GUIDE Guide		
	[≡+]/FAV	PRE-CH Pre Ch		
	[≡i]/TV.R	SEARCH TV/R TV/R		
	[≡?]/Subt	AD SUBT Subt		
	[≡o]/Aspect	PICTURE FORMAT Format		
	[≡..]	DISC NAV LIST List		
	Red	A Red		
	Green	B Green		
	Yellow	C Yellow		
	Blue	D Blue		

