
 



 
 

 



 











 
 
 
 
 
 







 














 

 










 


Original	Replacement
 Eject	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10	 Guide
 Key Up	 Ch +
 Key Down	 Ch -
 Zoom	 Shift + Eject
 Display	 Info
 Echo Up	 Shift + Ch +

Original	Replacement
 Echo Down	 Shift + Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Enter	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Setup	 Options
 Mute	 Mute
 Clear	 Exit
 Prog	 Sleep
 Subtitle	 Subt
 Language	 Dual
 Title-Return	 Back
 A-B	 TV/R
 Pause	 Pause





Original	Replacement	Original	Replacement
 Play	 Play		
 Stop	 Stop		
 <<	 <<		
 >>	 >>		
 I<<	 I<<		
 >>I	 >>I		
 Angle	 Red		
 Time	 Shift + AV		
 Repeat	 Text		
 Karaoke	 Power		
 PBC	 Smart		
 R/L	 3D		
 N/P	 AV		
 Step	 Media		
 Slow	 Yellow		

