









 
 
 
 
 





 



 

 

 





 

 


 
 




 

 
 



 
 
 





Original	Replacement
 Power	 Power
 Open/Close VCR	 Pre Ch
 Open/Close	 Guide
 DVD/VCR	 Media
 Input Select	 Shift + AV
 Display	 Info
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Up	 Up

Original	Replacement
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 P+	 Ch +
 P-	 Ch -
 TRK+	 Vol +
 TRK-	 Vol -
 Setup	 Options
 Cancel	 Exit
 Return	 Back
 Title Menu/Top	 Menu
 DVD Menu	 D. Menu
 One Touch	 Green
 Repeat A-B	 Text
 Play Mode/Repeat	 Shift + Play
 Zoom	 Eject





Original		Replacement	
	CM Skip		Yellow
	Audio/Audio		Dual
	Subtitle/ATR		Subt
	Progressive		Smart
	Clock/Counter		3D
	Angle/00:00:00		Red
	LZero		Format
	Timer Rec		AV
	Rec Mode / Speed	+	Shift + Rec
	Dubbing		Blue
	TV/VCR		TV/R
	>>		>>
	Play		Play
	<<		<<
	I<< Skip Index -		I<<
	Stop		Stop
	>>I Skip		>>I

Original		Replacement	
	Rec/OTR		Rec
	Pause II/ <>		Pause
	I>		List



Index+