



Original	Replacement
	Power
	Shift + Display / Media
	Shift + AV / Input / RDS
	AV / Input / RDS
	Picture / Format
	Menu / Home
	Shift + Up
	D.Menu / Top
	Info / Angle
	Exit / Cancel / Clear
	Smart / List
	Display / Media
	Up
	Guide / EPG / -/--
	Left
	OK
	Right

Original	Replacement
	Setup / OPT /
	Down
	Back / Return
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Text / Goto
	Subtitle / EQ
	Shift + Info / Angle
	Shift + Stop /
	1
	2
	3
	4
	5
	6





Original	Replacement
7	7
8	8
9	9
Mute	Mute / Dimmer
0	0
OIO	Shift + Smart / List
Vol+	Vol+
CH+	CH+ / Page+
Vol-	Vol-
CH-	CH- / Page-
Power Down	Shift + Power
Programme	Shift + CH- /
Programme Up	Shift + CH+ /
<</ <<	<< / Tune-
Play	Play / Slow
>>/>>	>> / Tune+
Stop	Stop / Hold

Original	Replacement
Pause/Step	Pause / Step / Freeze
Rec	Rec / Rec Mode

