 

 









 









 

 







 



 



 



 



 
 






 



 











Original	Replacement	Original	Replacement
 Power	 Power	 Zoom	 Zoom / Size
 DVD/CD	 Shift + 2	 Playlist2	 Green / APP / Repeat
 Tuner(FM/AM)	 Shift + 6	 7	 7
 Sound Retreiver	 Shift + Title / Sound	 8	 8
 USB	 Shift + 8	 9	 9
 Line	 TV/Radio /	 Playlist3	 Yellow / YouTube / Repeat
 Open/Close	 Eject / Surround	 Clear	 Exit / Cancel / Clear
 1	 1	 0	 0
 2	 2	 Display	 Display / Media
 Audio	 Audio / Lang I/II	 Top Menu	 D.Menu / Top
 3	 3	 Setup	 Setup / OPT /
 Subtitle	 Subtitle / EQ	 Up/Tune+	 Up
 Playlist1	 Red / Netflix / Search	 Menu	 Menu / Home
 4	 4	 SR+	 Picture / Format
 5	 5	 Left/ST-	 Left
 Angle	 Info / Angle	 Enter	 OK
 6	 6	 Right/ST+	 Right





Original	Replacement	Original	Replacement
	 Smart / List		 CH+ / Page+
	 +  Shift + Menu /		 +  Shift + Vol+
	 Down		 Sleep / Timer
	 Back / Return		 AV / Input / RDS
	 Guide / EPG / -/--		 CH- / Page-
	 Fav / Marker / PC		 +  Shift + Vol-
	 +  Shift + Eject / Surround		 Mute / Dimmer
	 Text / Goto		 Vol-
	 Sound / Title		 Vol+
	 << / Tune-		
	 Play / Slow		
	 >> / Tune+		
	 I<< / Preset-		
	 Pause / Step / Freeze		
	 Stop / Hold		
	 >>I / Preset+		
	 +  Shift + Power		

