

 









 



 

 


 







Original	Replacement
 SOURCE	 RDS AV INPUT AV / Input / RDS
 Power	 Power
 1	 TV 1 1
 2	 DVD 2 2
 3	 CD - STB 3 3
 4	 VIDEO 4 4
 5	 TAPE 5 5
 6	 TUNER 6 6
 7	 AUX - HDD 7 7
 8	 USB 8 8
 9	 BLUETOOTH 9 9
 EPG	 --/-- GUIDE EPG Guide / EPG / --/--
 0	 HDMI - SAT 0 0
 PRE-CH	 RETURN BACK Back / Return
 HDMI	 SHIFT + HDMI - SAT 0 Shift + 0
 YPbPr	 OPT-TOOLS SETUP Setup / OPT /
 VIDEO	 SHIFT + VIDEO 4 Shift + 4

Original	Replacement
 PC	 SHIFT + PC FAV MARKER Shift + Fav / Marker / PC
 Vol CH+	 CH PAGE CH+ / Page+
 Mute	 DIMMER MUTE Mute / Dimmer
 Vol+	 VOL + Vol+
 Vol-	 VOL - Vol-
 ZOOM	 SIZE ZOOM Zoom / Size
 CH-	 CH PAGE - CH- / Page-
 DUAL	 LANG I/II AUDIO Audio / Lang I/II
 ADJ AUDIO	 TITLE SOUND Sound / Title
 ADJ VIDEO	 FORMAT PICTURE Picture / Format
 SLEEP	 TIMER SLEEP Sleep / Timer
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 MENU/EXIT	 HOME MENU Menu / Home
 MENU/EXIT	 CLEAR EXIT CANCEL Exit / Cancel / Clear





Original	Replacement
	Down
	Info / Angle
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Text / Goto
	Shift + Text /
	Shift + Zoom /
	>> / Tune+
	Play / Slow
	Subtitle / EQ
	Stop / Hold
	<< / Tune-
	Fav / Marker / PC
	Smart / List
	Shift + Audio / Lang I/II

Original	Replacement
	Pause / Step / Freeze

