





 

 









































 
 






 













Original	Replacement	Original	Replacement
	Power		Power
	Tv/DTV		TV/Radio /
	Input1		Shift + 1
	Input2		Shift + 2
	Input3		Shift + 3
	Input4		Shift + 4
	[  > < / ≡+ ]		D.Menu / Top
	[ <> / ≡◇ ]		Picture / Format
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	[i+]/Info		Info / Angle
	0		0
	P+		CH+ / Page+
	I-II		Audio / Lang I/II
	Vol+		Vol+
	P-		CH- / Page-
	Mute		Mute / Dimmer
	Vol-		Vol-
	Return		Back / Return
	Up		Up
	Home Menu		Menu / Home
	Left		Left
	Enter		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	EPG		Guide / EPG / -/-





Original	Replacement	Original	Replacement
	Red / Netflix / Search		
	Green / APP / Repeat		
	Yellow / YouTube / Repeat		
	Blue / Prime Video / Random		
	Subtitle / EQ		
	Display / Media		
	Smart / List		
	Text / Goto		

