



Original	Replacement	Original	Replacement
	Power		Blue/[]
	Vol +		Info
	Vol -		Text
	Ch +		1
	Ch -		2
	Mute		3
	Menu		4
	Exit		5
	Back		6
	Ok		7
	Up		8
	Down		9
	Right		0
	Left		AV
	Red		Media
	Green		Play
	Yellow		>>





	Original	Replacement	Original	Replacement
	<<	<<		
	Stop	Stop		
	Pause	Pause		
	Rec	Rec		
	Mark	3D		
	0000	Guide		



 

 
 




Original	Replacement	Original	Replacement
Power	Power	Blue/[]	Blue
Vol+	Vol +	Info	Info
Vol-	Vol -	Text	Text
Mute	Mute	Play	Play
PR+	Ch +	Stop	Stop
PR-	Ch -	Rec	Rec
Exit	Exit	Pause	Pause
Menu	Menu	>>	>>
Back	Back	<<	<<
Up	Up	1	1
Down	Down	2	2
Right/Zoom+	Right	3	3
Left/Zoom-	Left	4	4
OK	Ok	5	5
Red/[o]	Red	6	6
Green/Timer/List	Green	7	7
Yellow	Yellow	8	8





Original	Replacement	Original	Replacement
 9	 9		
 AV	 AV		
 SP/LP	 Media		





Original	Replacement	Original	Replacement
	Power		Blue/[]
	Vol +		Info
	Vol -		Text
	Mute		1
	Ch +		2
	Ch -		3
	Menu		4
	Exit		5
	Back		6
	Up		7
	Down		8
	Right		9
	Left		0
	Ok		AV
	Red		Media
	Green		Play
	Yellow		Stop





	Original	Replacement	Original	Replacement
	>>		>>	>>
	<<		<<	<<
	Rec		Rec	Rec
	Pause		Pause	Pause
	Mark		3D	3D
	0000		GUIDE	GUIDE

