


 





















 











 





 





 



 

 



 












Original	Replacement	Original	Replacement
 Power	 Power	 Pause	 Pause
 Sleep	 Sleep	 Stop	 Stop
 Tuner/Band	 Green	 I<<	 I<<
 Auto/Mono	 Pre Ch	 >>I	 >>I
 1	 1	 Program	 Shift + Sleep
 2	 2	 Cancel	 Exit
 3	 3	 Deck 1/2	 Blue
 4	 4	 > Deck 1/2	 Right
 5	 5	 < Deck 1/2	 Left
 6	 6	 Stop Deck 1/2	 Ok
 7	 7	 << Deck 1/2	 <<
 8	 8	 >> Deck 1/2	 >>
 9	 9	 Rec Pause	 Rec
 0	 0	 Flat	 Options
 +10	 Guide	 EQ Space	 Dual
 CD	 Yellow	 Balance R	 Ch +
 Play	 Play	 Balance L	 Ch -





	Original	Replacement		Original	Replacement
	Vol+	 Vol +			
	Vol-	 Vol -			
	Muting	 Mute			

