



Original		Replacement		Original		Replacement	
	Power		Power		Up		Up
	Open/Close		Eject		Down		Down
	DVD		Red		Right		Right
	Tuner		Green		Left		Left
	Video		Yellow		Enter		Ok
	TV/AUX		Blue		Vol+		Vol +
	Sleep		Sleep		Vol-		Vol -
	I<<		I<<		Mute		Mute
	<<		<<		Setup		Options
	>>		>>		Pause/Step		Pause
	>>I		>>I		Menu/Return		Menu
	Play		Play		Goto Auto		Back
	Stop		Stop		1		1
	SP.Setup		Media		2		2
	CH-Level		Guide		3		3
	SR.Mode		List		4		4
	Title		Info		5		5





Original	Replacement	Original	Replacement
6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9
0	0	0	0
DISPFM mode	SEARCH TV/R		TV/R
Delay Time	CLEAR EXIT		Exit
Test Tone	PICTURE FORMAT		Format
Subtitle	AD SUBT		Subt
Slow	TIMER AV		AV
Audio	SOUND DUAL		Dual
A-B	HOME SMART		Smart
Zoom	SHIFT + ZOOM		Shift + Eject
Angle	ECO 3D		3D
Random	E-MANUAL D.MENU		D. Menu
Repeat	REPEAT TEXT		Text
Digest RDS	SHIFT + AD SUBT		Shift + Subt

Original	Replacement	Original	Replacement
MPX PTY Search	SHIFT + TIMER AV		Shift + AV
PBC	SHIFT + SEARCH TV/R		Shift + TV/R

