




 










 



 

 

 
 
 


 

 

 

 
 
 

 

 

 

 
 

 
 
 
 


 


 
 


 
 



 





Original		Replacement		Original		Replacement	
	Standby		Power		Vol-		Vol -
	Info		Info		Up		Up
	Subtitle		Subt		Down		Down
	Mute		Mute		Right		Right
	I<<		I<<		Left		Left
	>>I		>>I		OK		Ok
	Play		Play		EPG		Guide
	Pause		Pause		Back		Back
	<<		<<		1		1
	>>		>>		2		2
	Record		Rec		3		3
	Stop		Stop		4		4
	Menu		Menu		5		5
	Exit		Exit		6		6
	CH+		Ch +		7		7
	CH-		Ch -		8		8
	Vol+		Vol +		9		9





	Original	Replacement		Original	Replacement
	0		0		
	Media		Media		
	Timer		AV		
	Tv/Radio		TV/R		
	Audio		Dual		
	TTX		Text		
	USB		Smart		
	FAV		Pre Ch		
	Res		Options		
	Red		Red		
	Green		Green		
	Yellow		Yellow		
	Blue		Blue		

