



Original	Replacement
	Eject / Surround
	Power
	AV / Input / RDS
	D.Menu / Top
	Exit / Cancel / Clear
	Mute / Dimmer
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	+ Shift + Guide / EPG / -/-

Original	Replacement
	Setup / OPT /
	Back / Return
	Up
	Fav / Marker / PC
	Left
	OK
	Right
	Sleep / Timer
	Down
	Rec / Rec Mode
	Pause / Step / Freeze
	Play / Slow
	Stop / Hold
	Vol-
	Vol+
	CH- / Page-
	CH+ / Page+



