



 











 









 

 

 









 














 







Original	Replacement
 Power	 Power
 Tv/Rad	 TV/Radio /
 Subtitle	 Subtitle / EQ
 AD	 Audio / Lang I/II
 Ratio	 Picture / Format
 Input	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 List	 Smart / List
 0	 0

Original	Replacement
 Q.View	 Display / Media
 Vol+	 Vol+
 FAV	 Fav / Marker / PC
 P+	 CH+ / Page+
 Vol-	 Vol-
 Guide	 Guide / EPG / -/-
 P-	 CH- / Page-
 Mute	 Mute / Dimmer
 Text	 Text / Goto
 Info	 Info / Angle
 T.Opt.	 Setup / OPT /
 Settings	 Menu / Home
 Up	 Up
 Q.Menu	 D.Menu / Top
 Left	 Left
 OK	 OK
 Right	 Right





Original	Replacement
 Back	 Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 AV Mode	 Shift + AV / Input / RDS
 AV Mode	 Eject / Surround
 Rec	 Rec / Rec Mode
 Stop	 Stop / Hold
 <<	 << / Tune-
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random

Original	Replacement

