







 
 
 

























Original	Replacement
	Power
	Source
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Lang
	0
	TXT
	Vol+
	Mute
	P+
	AV / Input / RDS
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Audio / Lang I/II
	0
	Text / Goto
	Vol+
	Mute / Dimmer
	CH+ / Page+

Original	Replacement
	Vol-
	Home
	P-
	Netflix
	YouTube
	Guide
	Up
	i
	Left
	OK
	Right
	Down
	Back
	Exit
	*1
	prime video
	Red
	Menu / Home
	CH- / Page-
	Shift + Red / Netflix /
	Shift + Yellow / YouTube /
	Guide / EPG / -/--
	Info / Angle
	Left
	OK
	Right
	Down
	Back / Return
	Exit / Cancel / Clear
	Smart / List
	Shift + Blue / Prime
	Red / Netflix / Search



