





 

 
 



 




 

 
 

 







 

 

 
 

 

 

 




Original	Replacement	Original	Replacement
 Power	 Power	 Return	 Back / Return
 Info	 Info / Angle	 Vol +	 Vol+
 1	 1	 Up	 Up
 2	 2	 P +	 CH+ / Page+
 3	 3	 Left	 Left
 Input Select	 AV / Input / RDS	 Enter / CH List	 OK
 4	 4	 Right	 Right
 5	 5	 Vol -	 Vol-
 6	 6	 Down	 Down
 Picture Size	 Picture / Format	 P -	 CH- / Page-
 7	 7	 Audio I / II	 Audio / Lang I/II
 8	 8	 Text	 Text / Goto
 9	 9	 P <--> P	 Shift + Back / Return
 Guide / EPG	 Guide / EPG / -/-	 [≡?]	 Setup / OPT /
 Mute	 Mute / Dimmer	 Subtitle	 Subtitle / EQ
 0	 0	 Freeze	 Pause / Step / Freeze
 Menu	 Menu / Home	 [≡+]	 Stop / Hold





Original		Replacement		Original		Replacement	
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				

