
 

 
 






 




 
 
 
 
 



 

 



 


 
 
 

 
| Original | Replacement |
|--|---|
|  Power |  Power |
|  Disc |  Media |
|  Subtitle |  Subt |
|  Angle |  TV/R |
|  Zoom |  Eject |
|  Audio |  Dual |
|  Disc Menu |  D. Menu |
|  Setup |  Options |
|  Return/Title |  Back |
|  Display |  Info |
|  Up |  Up |
|  Down |  Down |
|  Right |  Right |
|  Left |  Left |
|  OK |  Ok |
|  I<< |  I<< |
|  Play |  Play |

| Original | Replacement |
|---|---|
|  >>I |  >>I |
|  Pause |  Pause |
|  Stop |  Stop |
|  Vol+ |  Vol + |
|  Vol- |  Vol - |
|  Mute |  Mute |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  Program |  Sleep |






 

 





 
 
 
 
 


 
 
 



| Original | Replacement |
|---|---|
|  Power |  Power |
|  Tuner |  Media |
|  Display |  Info |
|  Up |  Up |
|  Down |  Down |
|  Right |  Right |
|  Left |  Left |
|  OK |  Ok |
|  I<< |  I<< |
|  Play |  Play |
|  >>I |  >>I |
|  Stop |  Stop |
|  Vol+ |  Vol + |
|  Vol- |  Vol - |
|  Mute |  Mute |
|  1 |  1 |
|  2 |  2 |

| Original | Replacement |
|---|--|
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  Program |  Sleep |
|  Surr. |  Red |
|  Sound |  Dual |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |





 

 
 






 

 

 




 
 
 
| Original | Replacement |
|---|---|
|  Power |  Power |
|  TV |  Media |
|  Setup |  Options |
|  Display |  Info |
|  Up |  Up |
|  Down |  Down |
|  Right |  Right |
|  Left |  Left |
|  OK |  Ok |
|  I<< |  I<< |
|  Play |  Play |
|  >>I |  >>I |
|  Stop |  Stop |
|  Tv Vol+ |  Vol + |
|  Tv Vol- |  Vol - |
|  Mute |  Mute |
|  1 |  1 |

| Original | Replacement |
|---|--|
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  Surr. |  Red |
|  Sound |  Dual |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |





| Original | Replacement |
|---|---|
|  Power |  Power |
|  AUX/DI |  Media |
|  Display |  Info |
|  Up |  Up |
|  Down |  Down |
|  Right |  Right |
|  Left |  Left |
|  OK |  Ok |
|  I<< |  I<< |
|  Play |  Play |
|  >>I |  >>I |
|  Stop |  Stop |
|  Vol+ |  Vol + |
|  Vol- |  Vol - |
|  Mute |  Mute |
|  1 |  1 |
|  2 |  2 |

| Original | Replacement |
|---|--|
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  Program |  Sleep |
|  Surr. |  Red |
|  Sound |  Dual |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

