

 


 
 
 
 
 
 
 


 

 
 
 

 



 
 
 
 

 











 
 






 

 
 
 
 
 

 
 
 
 
 

 




Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	Function		Menu
	Sound		Dual
	EQ		Subt
	DVD		Media
	1/Timer On/Off		1
	2/Timer/Clock		2
	3/Sleep		3
	4/Disc Menu		4
	5/Title Menu		5
	6		6
	7		7
	8/SYNC		8
	9		9
	0		0
	Vol+		Vol +
	Vol-		Vol -
	I<<</RDS PTY		I<<<
	>>>/RDS Display		>>>
	Stop		Stop
	Play		Play
	Pause		Pause
	Repeat		Text
	Home		Smart
	USB Rec		Rec
	Tools		Options
	Info		Info
	Return		Back
	Exit		Exit
	Up/Tuning Up		Up
	Down/Tuning		Down



Down



Original	Replacement	Original	Replacement
Right/#	Right		
Left/b	Left		
Enter	Ok		
Red/Display	Red		
GreenMo/ST	Green		
Yellow	Yellow		
Blue/Keycon	Blue		
Speed/CD Rec	3D		
My Karaoke	TV/R		
Mic Vol+	Ch +		
Mic Vol-	Ch -		

