








Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Text		Text / Goto
	0		0
	Recall		Back / Return
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Audio		Audio / Lang I/II
	Sleep		Sleep / Timer
	Source		AV / Input / RDS
	CH+		CH+ / Page+
	Vol+		Vol+
	Display		Display / Media
	CH-		CH- / Page-
	Vol-		Vol-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Menu		Menu / Home
	OK		OK





Original	Replacement
 Exit	 Exit / Cancel / Clear
 Subtitle	 Subtitle / EQ
 Index	 Info / Angle
 Size	 Zoom / Size
 Reveal	 D.Menu / Top
 Mix	 Setup / OPT /
 Play	 Play / Slow
 Pause/Hold	 Pause / Step / Freeze
 I<</Cancel	 I<< / Preset-
 >>I/Subpage	 >>I / Preset+
 EPG	 Guide / EPG / -/--
 FAV	 Fav / Marker / PC
 Stop	 Stop / Hold
 <</FAV-	 << / Tune-
 >>/FAV+	 >> / Tune+
 Media	 +  Shift + Display / Media
 Rec	 Rec / Rec Mode

Original	Replacement
 Timeshift	 Smart / List
 Tv/Radio	 TV/Radio /

