


 
 

 
 
 

 
 
 
 

 







 





Original	Replacement
	Power
	Mute / Dimmer
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Text / Goto
	0
	Back / Return
	Picture / Format
	Sound / Title
	Audio / Lang I/II

Original	Replacement
	Sleep / Timer
	AV / Input / RDS
	CH+ / Page+
	Vol+
	Display / Media
	CH- / Page-
	Vol-
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Up
	Down
	Right
	Left
	Menu / Home
	OK



