



 



| Original | Replacement | Original | Replacement |
|---|-------------|---|-----------------------------|
|  | Power |  | Sleep / Timer |
|  | Mute |  | AV / Input / RDS |
|  | 1 |  | CH+ / Page+ |
|  | 2 |  | Vol+ |
|  | 3 |  | Display / Media |
|  | 4 |  | CH- / Page- |
|  | 5 |  | Vol- |
|  | 6 |  | Red / Netflix / Search |
|  | 7 |  | Green / APP / Repeat |
|  | 8 |  | Yellow / YouTube / Repeat |
|  | 9 |  | Blue / Prime Video / Random |
|  | Text |  | Up |
|  | 0 |  | Down |
|  | Recall |  | Right |
|  | P.Mode |  | Left |
|  | S.Mode |  | Menu / Home |
|  | Audio |  | OK |





| Original | Replacement |
|--|---|
|  Exit |  Exit / Cancel / Clear |
|  Subtitle |  Subtitle / EQ |
|  Index |  Info / Angle |
|  Size |  Zoom / Size |
|  Reveal |  D.Menu / Top |
|  Mix |  Setup / OPT / |
|  Play |  Play / Slow |
|  Pause/Hold |  Pause / Step / Freeze |
|  I<</Cancel |  I<< / Preset- |
|  >>I/Subpage |  >>I / Preset+ |
|  EPG |  Guide / EPG / -/- |
|  FAV |  Fav / Marker / PC |
|  Stop |  Stop / Hold |
|  <</FAV- |  << / Tune- |
|  >>/FAV+ |  >> / Tune+ |
|  Media |  +  Shift + Display / Media |
|  Rec |  Rec / Rec Mode |

| Original | Replacement |
|---|--|
|  Timeshift |  Smart / List |
|  Tv/Radio |  TV/Radio / |

