

 



 
 
 
 
 



 
 


 
 


 


 
 

 




 









 

 


 


 
 


 
 
 
 
 
 
 
 








Original	Replacement	Original	Replacement
 Power	 Power	 [i+]/[?]	 DISPLAY INFO Info
 Source	 TIMER AV AV	 RETURN	 RETURN BACK Back
 [+]	 ECO 3D 3D	 ZOOM	 ZOOM Eject
 I<<	 I<<	 MENU	 TOP MENU MENU Menu
 >>I	 >>I	 Up	 Up
 <<	 <<	 Down	 Down
 >>	 >>	 Right	 Right
 Stop	 Stop	 Left	 Left
 Play	 PLAY MODE Play	 OK	 OK Ok
 Pause	 II Pause	 1	 1
 Red	 A Red	 2	 2
 Green	 B Green	 3	 3
 Yellow	 C Yellow	 4	 4
 Blue	 D Blue	 5	 5
 Repeat	 SHIFT + REPEAT TEXT Shift + Text	 6	 6
 Audio	 SOUND DUAL Dual	 7	 7
 Guide	 GUIDE Guide	 8	 8





Original	Replacement	Original	Replacement
	9		9
	0		0
	FAV	 + 	Shift + Pre Ch
	[≡]		Text
	[...]		Subt
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Prog+		Ch +
	Prog-		Ch -
	Recall		Pre Ch

