 

 
 






 
 


 
 

 





 

 


 
 
 
 




 





Original	Replacement
 Power Tv	 Power
 Tv/Video	 TV/R
 CH+	 Ch +
 CH-	 Ch -
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 10/Tv Return	 Guide
 +10/100+	 Pre Ch
 Vol+	 Vol +

Original	Replacement
 Vol-	 Vol -
 Muting	 Mute





Original	Replacement
 Power Audio	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 10 / Tv Return	 Guide
 +10 / 100+	 Pre Ch
 CH+	 Ch +
 CH-	 Ch -
 Up	 Up
 Enter	 Ok

Original	Replacement
 Down	 Down
 Right/Presets Up	 Right
 Left/Presets Down	 Left
 Muting	 Mute
 Menu/PL	 Menu
 Top Menu/PG	 Shift + Menu
 On Screen	 3D
 Back / Rec	 Rec
 Stop / Memory	 Stop
 Play	 Play
 Pause/FM Mode	 Pause
 I<</Tuning-	 I<<
 >>I/Tuning+	 >>I
 <</Slow-	 <<
 >>/Slow+	 >>
 Audio	 Dual
 Angle	 Shift + 3D



 


 









Original	Replacement
Zoom	Eject
Subtitle	Subt
Vol+	Vol +
Vol-	Vol -
Repeat	Text
Page	List
Surround	Smart
PTY Search	AV
TA/News/Info	Info
PTY Select-	Shift + Left
PTY Select+	Shift + Right
Level+	Shift + Up
Level-	Shift + Down
Sleep	Sleep
Return	Back
Display	Shift + Info
Play Mode	Format

Original	Replacement
STB Control	Shift + Smart
Dimmer	Shift + Media
USB Memory	Media
Cancel	Exit
DVD	Blue
iPod	Red
FM/AM	Green
VCR/Video Control	Yellow
Tv/Video	TV/R
Set Up	D. Menu
SPK Level	Shift + AV
Setting	Options
Treble/Bass	Shift + Sleep
Title/Group	Shift + List
VFP/Scan Mode	Shift + Options
Tv Sound	Shift + Dual





	Original	Replacement	Original	Replacement
	Power VCR/STB			Power
<b>1</b>	1	<b>1</b>		1
<b>2</b>	2	<b>2</b>		2
<b>3</b>	3	<b>3</b>		3
<b>4</b>	4	<b>4</b>		4
<b>5</b>	5	<b>5</b>		5
<b>6</b>	6	<b>6</b>		6
<b>7</b>	7	<b>7</b>		7
<b>8</b>	8	<b>8</b>		8
<b>9</b>	9	<b>9</b>		9
<b>0</b>	0	<b>0</b>		0
	Tv/Video			TV/R
	CH+			Ch +
	CH-			Ch -
	Vol+			Vol +
	Vol-			Vol -
	Muting			Mute

