







Original	Replacement	Original	Replacement
 Mute	 Mute	 Left	 Left
 Power	 Power	 Enter	 Ok
 Subtitle	 Subt	 Stop	 Stop
 Language	 Dual	 L / R	 3D
 Open / Close	 Eject	 1	 1
 Angle	 Format	 2	 2
 Prog	 Sleep	 Goto	 Media
 Title	 List	 3	 3
 Menu	 Menu	 4	 4
 Vol +	 Vol +	 5	 5
 Vol -	 Vol -	 6	 6
 Setup	 Options	 7	 7
 Play / Pause	 Play	 8	 8
 Play / Pause	 Pause	 9	 9
 Up	 Up	 10+	 Guide
 Down	 Down	 0	 0
 Right	 Right	 << Rev	 <<

Original	Replacement	Original	Replacement
 Mute	 Mute	 TV	 AUX
 Play Mode	 Rec Mode	 DVD	 SAT
 Disc Nav	 Sound	 AD	 Settings
 List	 Dual	 Subt	 Opt
 Prog	 Picture	 Eco	 3D
 Sleep	 TV/R	 Format	 3D
 E-Manual	 Repeat	 Zoom	 Timer
 D.Menu	 Text	 Up	 AV
 Top Menu	 Display	 Menu	 Info
 Menu	 Info	 OK	 Clear
 Exit	 Return	 Back	 Home
 Vol +	 Smart	 App	 Media
 Vol -	 Media	 CH +	 CH -
 1	 2	 3	 3
 2	 3	 4	 4
 3	 4	 5	 5
 4	 5	 6	 6
 5	 6	 7	 7
 6	 7	 8	 8
7	 8	 9	 9
8	 9	Guide	Pre-Ch
9	 10+	A	B
10+	 Guide	C	D
0	 0	Mandis SHOP	www.mandis.tv
<< Rev	 <<		



