 


 




 







 







 











































 




	Original	Replacement		Original	Replacement
	 Power	 Power		 -/--	 +  Shift + Guide / EPG / -/--
	 Mute	 Mute / Dimmer		 Jump	 Smart / List
	 Source	 AV / Input / RDS		 Menu	 Menu / Home
	 P.Mode	 Picture / Format		 Info	 Info / Angle
	 S.Mode	 Sound / Title		 Sleep	 Sleep / Timer
	 I/II/Audio	 Audio / Lang I/II		 Exit	 Exit / Cancel / Clear
	 P.Size	 Zoom / Size		 Up	 Up
	 1	 1		 Left	 Left
	 2	 2		 Enter	 OK
	 3	 3		 Right	 Right
	 4	 4		 Down	 Down
	 5	 5		 Vol+	 Vol+
	 6	 6		 Vol-	 Vol-
	 7	 7		 P-	 CH- / Page-
	 8	 8		 P+	 CH+ / Page+
	 9	 9		 Red/D.Setup	 Red / Netflix / Search
	 0	 0		 Red/D.Setup	 Setup / OPT /



