



Original	Replacement
Muting	Mute / Dimmer
Play	Play / Slow
Pause	Pause / Step / Freeze
Stop	Stop / Hold
<</>Slow/Tunin	<< / Tune-
Tuning+/Slow	>> / Tune+
I<</Preset-	I<< / Preset-
>>I/Preset+	>>I / Preset+
Bass Level	Sound / Title
Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
Open/Close	Eject / Surround
Band	Picture / Format
Sleep	Sleep / Timer
Tv/Video	TV/Radio /
DVD Menu	D.Menu / Top

Original	Replacement
DVD Setup	Setup / OPT /
Name	Text / Goto
AMP Menu	Menu / Home
Up	Up
Angle	Info / Angle
Left	Left
Enter	OK
Right	Right
Clear	Exit / Cancel / Clear
Down	Down
Return	Back / Return
Vol+	Vol+
Memory	Smart / List
Vol-	Vol-
Display	Display / Media
1	1
2	2















 



 





 



 

 







Original	Replacement
3	3
4	4
5	5
6	6
7	7
8	8
9	9
>10	Guide / EPG / -/--
0	0
Repeat	Green / APP / Repeat
Play Mode	Shift + Play /
Stereo/Mono	Shift + Audio / Lang I/II
Function	Shift + Setup / OPT / Tools
DVD Top Menu	Shift + Menu /
Sound Field+	Shift + Vol+
Night Mode	Shift + Smart / List
Sound Field-	Shift + Vol-

Original	Replacement
Enter1	Shift + 1
DVD Display	Shift + 2





	Original	Replacement		Original	Replacement
	Power Tv		Power		
	1		1		
	2		2		
	3		3		
	4		4		
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	0/10		0		
	-/--		Guide / EPG / -/--		
	Enter		OK		
	Tv Vol+		Vol+		
	Tv CH+		CH+ / Page+		
	Tv Vol-		Vol-		
	Tv CH-		CH- / Page-		

