


 



 

 





 





 



 

 

 

 






Original	Replacement
 Power	 Power
 VCR/DVD	 Media
 DVD Timer	 Green
 VCR Timer	 Red
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0/AUX	 0
 X/Cancel	 Exit
 Showview/Video Plus+	 Guide
 Prog/Check	 Sleep

Original	Replacement
 Display	 Info
 On Screen/Progressiv	 3D
 Top	 Shift + Menu
 Menu	 Menu
 Set Up	 Options
 Return	 Back
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 I<</Previous	 I<<
 >>/Next	 >>I
 <</Slow-	 <<
 Play/Select	 Play
 >>/Slow+	 >>
 Stop/Clear	 Stop





Original	Replacement	Original	Replacement
 Pause	 Pause		
 Rec	 Rec		
 Remain/Rec	 Shift + Rec		
 ↔	 Pre Ch		
 →	 Blue		
 Angle/Live Check	 AV		
 Subtitle	 Subt		
 TV/DVD-TV/VCR	 TV/R		
 Mute/Audio	 Mute		
 PR+	 Ch +		
 PR- TV/CBL/DVD	 Ch -		
 Vol+ Tv	 Vol +		
 Vol- Tv	 Vol -		

Original	Replacement	Original	Replacement

 






Original	Replacement	Original	Replacement
Power	Power	Prog/Check	Sleep
VCR/DVD	Media	Display	Info
DVD Timer	Green	On Screen/Progressiv	3D
VCR Timer	Red	Top	Shift + Menu
1	1	Menu	Menu
2	2	Set Up	Options
3	3	Return	Back
4	4	Up	Up
5	5	Down	Down
6	6	Right	Right
7	7	Left	Left
8	8	Enter	Ok
9	9	I<</Previous	I<<
0/AUX	0	>>/Next	>>I
X/Cancel	Exit	<</Slow-	<<
Memory/Mark	Smart	Play Select	Play
Showview/Video Plus+	Guide	>>/Slow+	>>






 







 



 







 












 
 

 







 



 







 



 






Original		Replacement		Original		Replacement	
	Stop/Clear		Stop				
	Pause		Pause				
	Rec		Rec				
	Remain/Rec		Shift + Rec				
	↔		Pre Ch				
	→		Blue				
	Angle/Live Check		AV				
	Subtitle		Subt				
	TV/DVD-TV/VCR		TV/R				
	Mute/Audio		Mute				
	PR+		Ch +				
	PR- TV/CBL/DVD		Ch -				
	Vol+ Tv		Vol +				
	Vol- Tv		Vol -				





Original	Replacement	Original	Replacement
 Power	 Power	 Menu	 Menu
 VCR/DVD	 Media	 Up	 Up
 DVD Timer	 Green	 Down	 Down
 VCR Timer	 Red	 Right	 Right
 1	 1	 Left	 Left
 2	 2	 Enter	 Ok
 3	 3	 I<</Previous	 I<<
 4	 4	 >>/Next	 >>I
 5	 5	 <</Slow-	 <<
 6	 6	 Play/Select	 Play
 7	 7	 >>/Slow+	 >>
 8	 8	 Stop/Clear	 Stop
 9	 9	 Pause	 Pause
 0/AUX	 0	 Rec	 Rec
 Prog/Check	 Sleep	 Remain/Rec	 Shift + Rec
 Display	 Info	 ↔	 Pre Ch
 Top	 Shift + Menu	 →	 Blue

Original	Replacement	Original	Replacement
 Power	 Power	 Menu	 Menu
 VCR/DVD	 Media	 Up	 Up
 DVD Timer	 Green	 Down	 Down
 VCR Timer	 Red	 Right	 Right
 1	 1	 Left	 Left
 2	 2	 Enter	 Ok
 3	 3	 I<</Previous	 I<<
 4	 4	 >>/Next	 >>I
 5	 5	 <</Slow-	 <<
 6	 6	 Play/Select	 Play
 7	 7	 >>/Slow+	 >>
 8	 8	 Stop/Clear	 Stop
 9	 9	 Pause	 Pause
 0/AUX	 0	 Rec	 Rec
 Prog/Check	 Sleep	 Remain/Rec	 Shift + Rec
 Display	 Info	 ↔	 Pre Ch
 Top	 Shift + Menu	 →	 Blue





Original		Replacement	
	Angle/Live Check		AV
	Subtitle		Subt
	PR+		Ch +
	PR- TV/CBL/DVD		Ch -
	Vol+ Tv		Vol +
	Vol- Tv		Vol -

Original		Replacement	

