
 



 


 
 
 

 
 
 
 
 
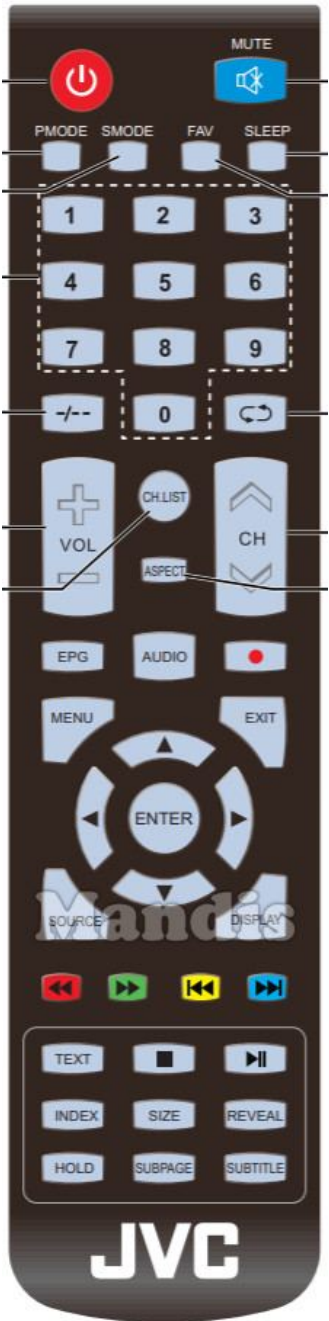


Original	Replacement
	Power
	Mute
	P.Mode
	S.Mode
	FAV
	Sleep
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Shift + Guide / EPG / -/-
	0

Original	Replacement
	Recall
	Vol+
	CH.List
	CH+ / Page+
	Vol-
	Shift + Picture / Format
	CH- / Page-
	Guide / EPG / -/-
	Audio / Lang I/II
	Rec / Rec Mode
	Menu / Home
	Exit / Cancel / Clear
	Up
	Left
	OK
	Right
	AV / Input / RDS





Original	Replacement
Down	Down
Display	Display / Media
Red	Red / Netflix / Search
<<	<< / Tune-
Green	Green / APP / Repeat
>>	>> / Tune+
Yellow	Yellow / YouTube / Repeat
I<<	I<< / Preset-
Blue	Blue / Prime Video / Random
>>I	>>I / Preset+
Text	Text / Goto
Stop	Stop / Hold
Play	Play / Slow
Pause	Pause / Step / Freeze
Index	D.Menu / Top
Size	Zoom / Size
Reveal	Shift + Back / Return

Original	Replacement
Hold	Shift + Stop /
Subpage	Setup / OPT /
Subtitle	Subtitle / EQ

