











 




Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 DTV/ATV	 Shift + AV / Input / RDS
 0	 0
 Recall	 Back / Return
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer

Original	Replacement
 Menu	 Menu / Home
 Source	 AV / Input / RDS
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Display	 Display / Media
 Vol+	 Vol+
 MTS	 Shift + Smart / List
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Rec List/D.Setup	 Setup / OPT /
 Rec List/D.Setup	 Smart / List
 CH-	 CH- / Page-
 Rec	 Rec / Rec Mode





Original	Replacement	Original	Replacement
Open/Close	Eject / Surround	D.Menu/Reveal	D.Menu / Top
Play	Play / Slow	Size/D.Title	+  Shift + Sound / Title
Pause/Timeshift	Pause / Step / Freeze	Size/D.Title	+  Shift + Zoom /
Stop/Freeze	Stop / Hold	Goto/Hold	+  Shift + Stop /
<<<	<<< / Tune-	Goto/Hold	+  Shift + Text /
Guide	Guide / EPG / -/--	Text/D.Display	+  Shift + Display / Media
>>>	>>> / Tune+	Text/D.Display	Text / Goto
Aspect	+  Shift + Picture / Format	Red/Prog	+  Shift + TV/Radio / Program
I<<<	I<<< / Preset-	Red/Prog	Red / Netflix / Search
Tv/Radio	TV/Radio /	Green/Step	+  Shift + Pause / Step /
>>>I	>>>I / Preset+	Green/Step	Green / APP / Repeat
FAV List	Fav / Marker / PC	Yellow/Repeat	Yellow / YouTube / Repeat
Zoom/Index	Zoom / Size	Yellow/Repeat	+  Shift + Green / APP /
Angle/Cancel	+  Shift + Exit / Cancel / Clear	Cyan/A-B	Blue / Prime Video / Random
Angle/Cancel	Info / Angle	Cyan/A-B	+  Shift + Yellow / YouTube /
Audio/Subpage	Audio / Lang I/II		
Subtitle	Subtitle / EQ		

