







 
 

 


 
 
 




Original		Replacement		Original		Replacement	
	Power		Power		>>I		>>I
	Source		AV		<<		<<
	Open/Close		Eject		>>		>>
	Sleep		Sleep		Stop		Stop
	1		1		Play		Play
	2		2		Pause		Pause
	3		3		Vol+		Vol +
	4		4		Vol-		Vol -
	5		5		Mute		Mute
	6		6		Repeat		Text
	7		7		Tuning+		Ch +
	8		8		Tuning-		Ch -
	9		9		Disc Menu		D. Menu
	0		0		Menu		Menu
	Dolby PL		Dual		Title Menu		TV/R
	DSP/EQ		Guide		Tools		Options
	I<<		I<<		Info		Info





Original		Replacement		Original	Replacement
	Return		Back		
	Exit		Exit		
	Up		Up		
	Down		Down		
	Right		Right		
	Left		Left		
	Enter		Ok		
	Red		Red		
	Green/Tuner		Green		
	Yellow/MO/ST		Yellow		
	Blue/CD Ripping		Blue		
	Dimmer		Subt		
	S.Vol		Format		
	P.Bass/Audio Upscale		3D		





Original	Replacement	Original	Replacement
Power	Power	Pause	Pause
Function Tv	AV	Vol+	Vol +
Sleep	Sleep	Vol-	Vol -
1	1	Mute	Mute
2	2	CH+	Ch +
3	3	CH-	Ch -
4	4	Menu	Menu
5	5	Tools	Options
6	6	Info	Info
7	7	Return	Back
8	8	Exit	Exit
9	9	Up	Up
0	0	Down	Down
<<	<<	Right	Right
>>	>>	Left	Left
Stop	Stop	Enter	Ok
Play	Play	Red	Red



