


 


 

 



 

 




 































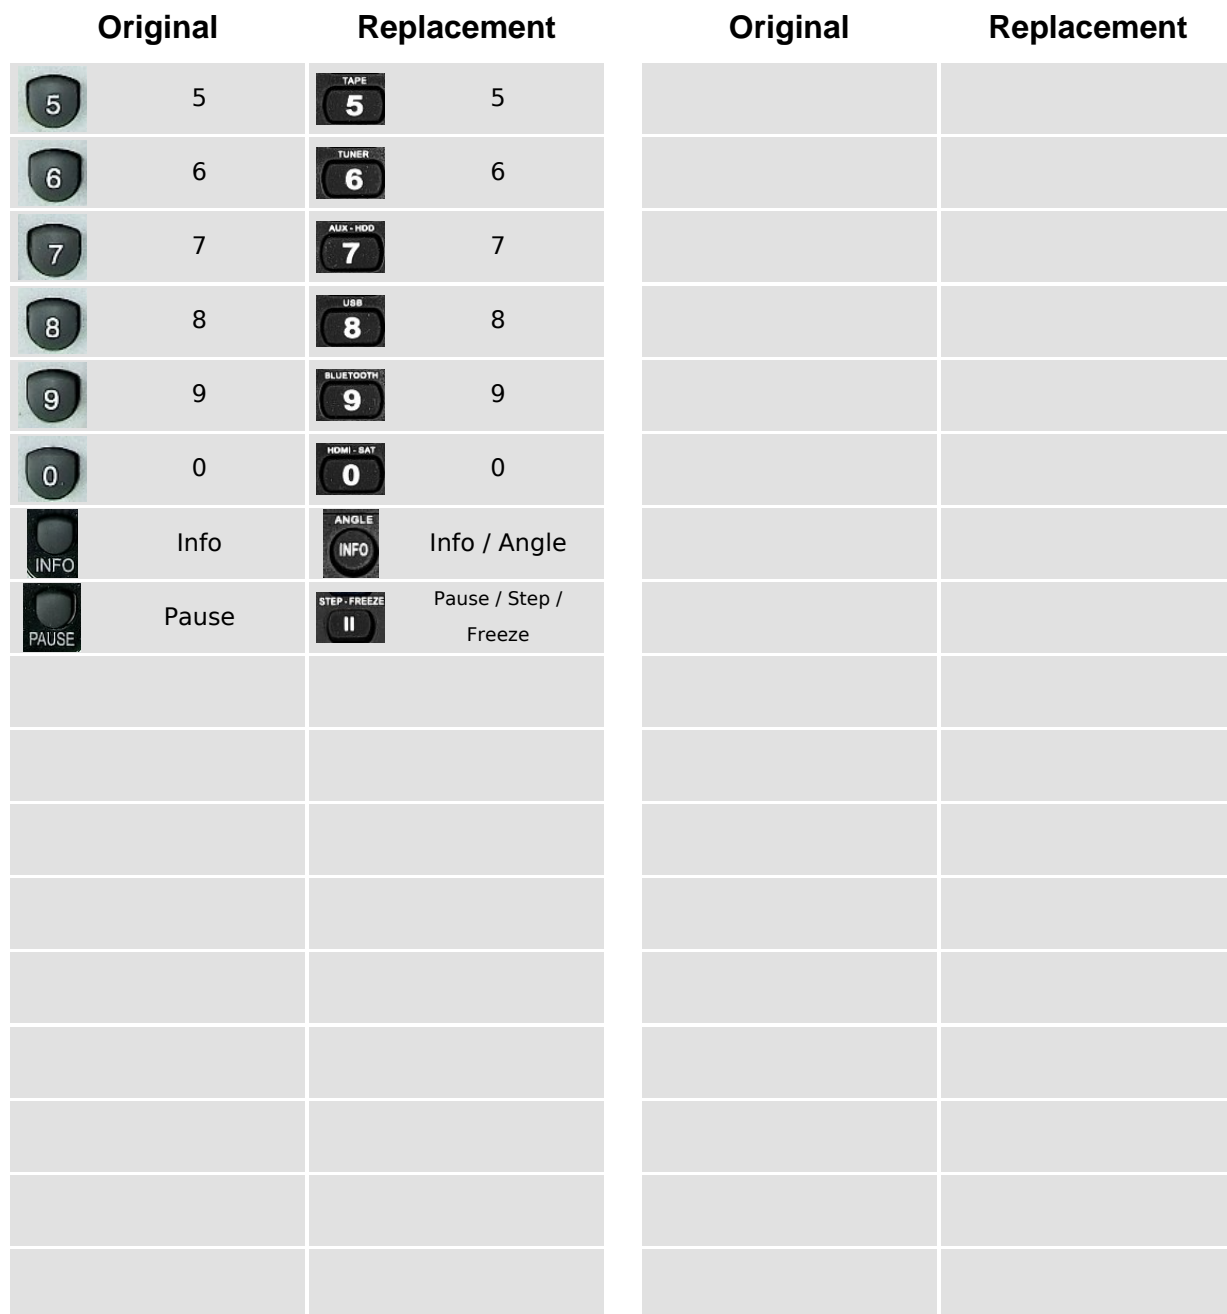




Original	Replacement
	 Power
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 TV/SAT AV / Input / RDS
	 TV/Radio /
	 Zoom / Size
	 Smart / List
	 Audio / Lang I/II
	 Guide / EPG / -/--
	 Sleep / Timer
	 Text / Goto
	 Exit / Cancel / Clear
	 Menu / Home
	 Display / Media
	 Mute / Dimmer

Original	Replacement
	 CH+ / Page+
	 CH- / Page-
	 Up
	 Down
	 Right
	 Left
	 OK
	 Vol+
	 Vol-
	 Back / Return
	 >>I / Preset+
	 I<< / Preset-
	 Fav / Marker / PC
	 1
	 2
	 3
	 4








 













Original	Replacement
	 Power
	 Smart / List
	 Info / Angle
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Zoom / Size
	 0
	 Audio / Lang I/II
	 Mute / Dimmer
	 Back / Return


















Original	Replacement
	 Fav / Marker / PC
	 CH+ / Page+
	 Down
	 Up
	 Right
	 Vol+
	 CH- / Page-
	 Vol-
	 Left
	 OK
	 Menu / Home
	 Exit / Cancel / Clear
	 Blue / Prime Video / Random
	 Pause / Step / Freeze
	 Red / Netflix / Search
	 Text / Goto
	 Display / Media









Original	Replacement	
Mute		Mute / Dimmer
PWR On/Off		Power
App	 + 	Shift + Green / APP /
Epg		Guide / EPG / -/--
Info		Info / Angle
Subt.List		Subtitle / EQ
TV		TV/Radio /
Text		Text / Goto
Zoom		Zoom / Size
Menu		Menu / Home
TV/SAT		AV / Input / RDS
Menu Up		Up
Display		Display / Media
Menu Left		Left
OK Enter		OK
Menu Right		Right
Exit		Exit / Cancel / Clear





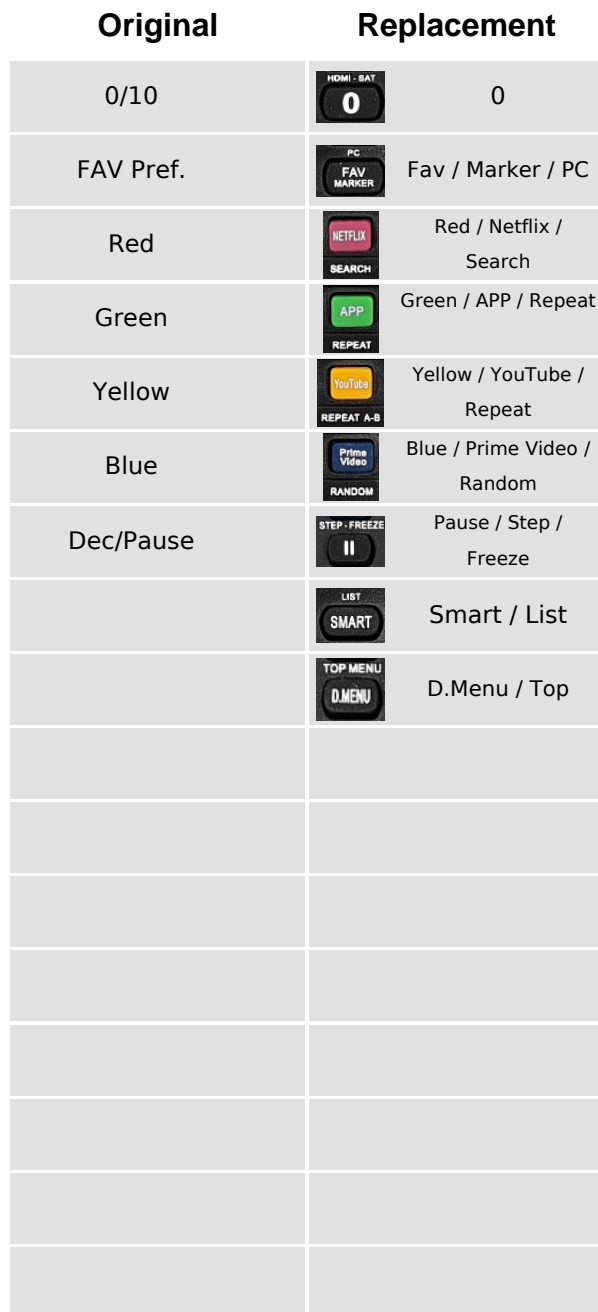












Original	Replacement	
Menu Down		Down
Back		Back / Return
Volume+		Vol+
CH/Page+		CH+ / Page+
Volume-		Vol-
CH/Page-		CH- / Page-
Audio		Audio / Lang I/II
1. ?		1
2abc		2
3def		3
4ghi		4
5jkl		5
6mno		6
7pqrm		7
8tuv		8
9wxyz		9
Guide Pilote	 + 	Shift + Guide / EPG / -/--







Original	Replacement	
Power		Power
Mute		Mute / Dimmer
Pause		Pause / Step / Freeze
Audio		Audio / Lang I/II
Zoom		Zoom / Size
Timer		Sleep / Timer
Tv/Radio		TV/Radio /
Text		Text / Goto
Tv/SAT		AV / Input / RDS
Menu		Menu / Home
Up/CH+		Up
Info		Info / Angle
Left		Left
OK		OK
Right		Right
Exit		Exit / Cancel / Clear
Down/CH-		Down

Original	Replacement	
Recall		Back / Return
Vol+		Vol+
List		Smart / List
P+		CH+ / Page+
Vol-		Vol-
M/P		Display / Media
P-		CH- / Page-
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
EPG		Guide / EPG / -/-



