




 

 

 



 

 






 








 








 
 

 

 



 



 
 


 



 





 













 


Original	Replacement	Original	Replacement
 Power	 Power	 [i+]/[?]	 Info
 Mute	 Mute	 Red	 Red
 []	 TV/R	 Green	 Green
 Sound	 Dual	 Yellow	 Yellow
 *	 Options	 Blue	 Blue
 Source	 AV	 [≡]/Text	 Text
 [X]	 Format	 +/-/Recall	 Pre Ch
 1	 1	 Guide	 Guide
 2	 2	 Up	 Up
 3	 3	 OK	 Ok
 4	 4	 Down	 Down
 5	 5	 Right	 Right
 6	 6	 Left	 Left
 7	 7	 Prog+	 Ch +
 8	 8	 Prog-	 Ch -
 9	 9	 Vol+	 Vol +
 0	 0	 Vol-	 Vol -





Original	Replacement	Original	Replacement
 Menu	 Menu	 Right	 Shift + Right
 [+]	 3D	 Left AUX/Video	 Shift + Left
 ≡	 Smart	 OK AUX/Video	 Shift + Ok
 Power	 Shift + Power	 Prog+	 Shift + Ch +
 1 AUX/Video	 Shift + 1	 Prog-	 Shift + Ch -
 2 AUX/Video	 Shift + 2	 Rec AUX/Video	 Rec
 3 AUX/Video	 Shift + 3		
 4 AUX/Video	 Shift + 4		
 5 AUX/Video	 Shift + 5		
 6 AUX/Video	 Shift + 6		
 7 AUX/Video	 Shift + 7		
 8 AUX/Video	 Shift + 8		
 9 AUX/Video	 Shift + 9		
 0 AUX/Video	 Shift + 0		
 -/- AUX/Video	 Shift + Pre Ch		
 Up AUX/Video	 Shift + Up		
 Down	 Shift + Down		

Original	Replacement	Original	Replacement
 Right	 Shift + Right		
 Left AUX/Video	 Shift + Left		
 OK AUX/Video	 Shift + Ok		
 Prog+	 Shift + Ch +		
 Prog-	 Shift + Ch -		
 Rec AUX/Video	 Rec		



AUX/Video