


 


 







 
 


 


 
 



 



 
 


 



 



 



 


 
 

 









 
 


 




Original	Replacement	Original	Replacement
 Standby	 Power	 Down	 Down
 PVR Rec	 Rec	 Right	 Right
 PVR List	 List	 Left	 Left
 Mute	 Mute	 OK	 Ok
 EPG	 Guide	 Vol+	 Vol +
 Audio	 Dual	 Vol-	 Vol -
 Info	 Info	 1	 1
 DTV/VCR	 Smart	 2	 2
 TTX	 Text	 3	 3
 Subtitle	 Subt	 4	 4
 Menu	 Menu	 5	 5
 Exit	 Exit	 6	 6
 Tv/Radio	 TV/R	 7	 7
 Favourite	 Pre Ch	 8	 8
 CH+	 Ch +	 9	 9
 CH-	 Ch -	 0	 0
 Up	 Up	 Recall	 Back



 

 





 
 


 

 
 



 


 
 




 


 

 








 


 




Original		Replacement		Original		Replacement	
	Goto		3D				
	<<		<<				
	>>		>>				
	1<<		1<<				
	>>1		>>1				
	Play		Play				
	Pause		Pause				
	Stop		Stop				
	RPT		Media				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				





Original	Replacement	Original	Replacement
 Standby	 Power	 Down	 Down
 PVR Rec	 Rec	 Right	 Right
 PVR List	 List	 Left	 Left
 Mute	 Mute	 OK	 Ok
 EPG	 Guide	 Vol+	 Vol +
 Audio	 Dual	 Vol-	 Vol -
 Info	 Info	 1	 1
 DTV/VCR	 Smart	 2	 2
 TTX	 Text	 3	 3
 Subtitle	 Subt	 4	 4
 Menu	 Menu	 5	 5
 Exit	 Exit	 6	 6
 Tv/Radio	 TV/R	 7	 7
 Favourite	 Pre Ch	 8	 8
 CH+	 Ch +	 9	 9
 CH-	 Ch -	 0	 0
 Up	 Up	 Recall	 Back





Original	Replacement	Original	Replacement
 GOTO	 3D		
			
			
			
			
			
			
			
			
			
			
			
			

