
 


 


 


 


 


 


 

 

 



 







 



 



 



 



 



 

 

 





Original	Replacement	Original	Replacement
<<	 << / Tune-	 8	 8
>>	 >> / Tune+	 9	 9
I<<	 I<< / Preset-	 [=?]/Source	 Eject / Surround
>>I	 >>I / Preset+	 0	 0
Play	 Play / Slow	 O)/I/II/Audio	 Audio / Lang I/II
Pause	 Pause / Step / Freeze	 Menu	 Menu / Home
Stop	 Stop / Hold	 Exit	 Exit / Cancel / Clear
 Power	 Power	 Up	 Up
 [=i]/Info	 Info / Angle	 Left	 Left
 Mute	 Mute / Dimmer	 Enter	 OK
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 CH+	 CH+ / Page+
 4	 4	 Index	 Display / Media
 5	 5	 Vol+	 Vol+
 6	 6	 CH-	 CH- / Page-
 7	 7	 List	 Smart / List





Original		Replacement		Original	Replacement
	Vol-		Vol-		
	♥		Fav / Marker / PC		
	Sleep		Sleep / Timer		
	EPG		Guide / EPG / -/--		
	Recall		Back / Return		
	Red		Red / Netflix / Search		
	Green		Green / APP / Repeat		
	Yellow		Yellow / YouTube / Repeat		
	Blue		Blue / Prime Video / Random		
	[≡]		Text / Goto		
	[≡+]/Still		Zoom / Size		
	Radio		TV/Radio /		
	[≡◆]/[++]		Picture / Format		
	[≡x]		Setup / OPT /		
	[≡o]/Subtitle		Subtitle / EQ		
	DMP		D.Menu / Top		
	Rec		Rec / Rec Mode		

