

 
 
 










Original	Replacement	Original	Replacement
Standby	Power	Right	Right
Rec PVR	Rec / Rec Mode	Vol+	Vol+
List PVR	Smart / List	Favourite	Fav / Marker / PC
Mute	Mute / Dimmer	CH-	CH- / Page-
EPG	Guide / EPG / -/--	Down	Down
Info	Info / Angle	Tv/Radio	TV/Radio /
TTX	Text / Goto	1	1
Audio	Audio / Lang I/II	2	2
DTV/VCR	AV / Input / RDS	3	3
Subtitle	Subtitle / EQ	Recall	Back / Return
Menu	Menu / Home	4	4
CH+	CH+ / Page+	5	5
Up	Up	6	6
Exit	Exit / Cancel / Clear	Goto	Shift + Text /
Left	Left	7	7
Vol-	Vol-	8	8
OK	OK	9	9



 

 

 

 



 








 


 



 

 



 





 

 

 



 





 

 



 



 







Original	Replacement
	 0
	 << / Tune-
	 >> / Tune+
	 I<< / Preset-
	 >>I / Preset+
	 Play / Slow
	 Pause / Step / Freeze
	 Stop / Hold
	 +  Shift + Green / APP / REPEAT
	 Zoom / Size
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random

Original	Replacement





Original		Replacement		Original		Replacement	
	Standby		Power		Right		Right
	Rec PVR		Rec / Rec Mode		Vol+		Vol+
	List PVR		Smart / List		Favourite		Fav / Marker / PC
	Mute		Mute / Dimmer		CH-		CH- / Page-
	EPG		Guide / EPG / -/-		Down		Down
	Info		Info / Angle		Tv/Radio		TV/Radio /
	TTX		Text / Goto		1		1
	Audio		Audio / Lang I/II		2		2
	DTV/VCR		AV / Input / RDS		3		3
	Subtitle		Subtitle / EQ		Recall		Back / Return
	Menu		Menu / Home		4		4
	CH+		CH+ / Page+		5		5
	Up		Up		6		6
	Exit		Exit / Cancel / Clear		Goto		Shift + Text /
	Left		Left		7		7
	Vol-		Vol-		8		8
	OK		OK		9		9





Original		Replacement	
	0		0
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	RPT		Shift + Green / APP /
	Red/Zoom		Zoom / Size
	Red/Zoom		Red / Netflix / Search
	Green/←		Green / APP / Repeat
	Yellow/→		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Original		Replacement	

